

Marmon-Herrington MT22 Series Parts Manual

Pro Gear's Marmon-Herrington MT22 Series Service Manual to assist in identifying your Marmon-Herrington unit.



If you need any assistance identifying the correct axle unit for your truck and equipment, contact your Marmon-Herrington replacement part specialists at Pro Gear and Transmission.

Pro Gear Transmission has same day shipping and 1000's of products in stock and ready to ship internationally for your next project.

For parts or service contact the Hendrickson specialists at Pro Gear & Transmission, Inc.

1 (877) 776-4600
(407) 872-1901
parts@eprogear.com

Marmon-Herrington

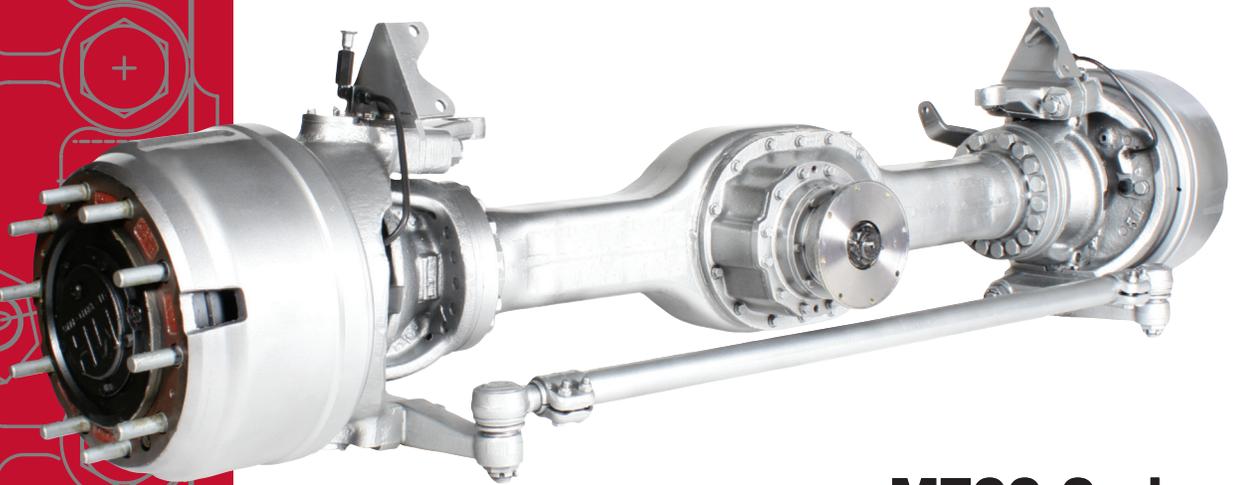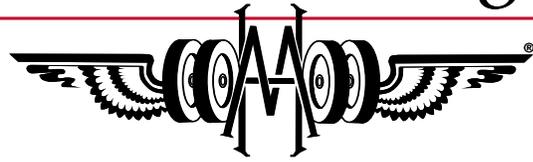

MT22 Series **Parts Manual**

TABLE OF CONTENTS

FORWARD

WARRANTY POLICY AND PROCEDURE 3-5

MT22/R/N/H AXLE

DIFFERENTIAL CARRIER HOUSING MT22/R/N/H 6-7

DIFFERENTIAL MT22/R/N/H 8-9

DIFFERENTIAL CARRIER HOUSING MTL22 10-11

DIFFERENTIAL MTL22 12-13

DIFFERENTIAL LOCK AIR CHAMBER MTL22 14-15

AXLE HOUSING MT22/R/N/H 16-17

AXLE SHAFT ASSEMBLY MT22/R/N/H 2005 and Older 18-19

AXLE SHAFT ASSEMBLY MT22/R/N/H 2005 and Newer 20-21

PLANETARY MT22/R/N/H 22-23

WHEEL HUB, BRAKE DRUM MT22/R/N/H 24-25

BRAKE MT22/R/N/H 26-27

TIE-ROD MT22/R/N/H 28-29

Marmon-Herrington



13001 Magisterial Drive • Louisville, KY 40223
(502) 253-0277 • (800) 227-0727 • Fax (502) 253-0317
E-mail: info@marmon-herrington.com
www.marmon-herrington.com

FORWARD

GENERAL

This manual has been prepared for operators and service personnel working with the Marmon-Herrington series of transfer cases and front drive axles. For further technical assistance, please contact Marmon-Herrington Customer Service.

Please observe and follow all procedural and maintenance guidelines to ensure reliable operation and optimum service life. The Marmon-Herrington basic service schedule will integrate seamlessly with most preventative maintenance programs.

Marmon-Herrington shall not be liable for component failures or damages caused by operational abuse or neglect. Please review the Warranty Statement for a detailed explanation of coverage and claim reporting procedures.

We thank you for your investment in Marmon-Herrington equipment, and look forward to serving your needs in the best tradition of engineering excellence.

MISCELLANEOUS ISSUES

Marmon-Herrington equipped vehicles are designed for “as needed” AWD operation only, in off-road conditions.

Due to issues associated with torque, drive line wind-up and ratio mis-match, Marmon-Herrington axles and transfer cases must never be operated in AWD mode or while engaged on hard, dry surfaces.

Owner/Operators should seek expert assistance when considering alternative gear ratios and/or tire sizes.

Marmon-Herrington Axles and Transfer Cases should only be shifted when at a full stop. “Shifting on the Fly” or shifting while in motion are prohibited modes of operation. This applies to front axle engagement, high and low transfer case ranges, and locking differentials. The only exceptions are those vehicles equipped with Marmon-Herrington’s **SAFE-T-SHIFT system**.

SAFE-T-SHIFT

In 2003, Marmon-Herrington developed an electronic management system to help prevent “shift on the fly” damage. It consists of a microprocessor that receives speed information from a remote sensor in the transfer case. The system is calibrated to activate the shift solenoids at the first detection of motion, and then cancel control functions at 4 mph.

Relative rotation speeds of the gear sets may require that the vehicle be rolled a few feet before the shift will complete.

Axle and transfer case shifting can generally be heard and felt inside the cab. Indicator lights on the dash will also illuminate when the shift is complete. **DO NOT ACCELERATE UNTIL APPROPRIATE POSITION IS INDICATED ON DASH LIGHT OR CONTROL SWITCH.**


Shift Procedure

1. With the vehicle at a complete stop, select the desired range or front axle position.
2. Place the main transmission in gear.
3. Allow the vehicle to idle forward (or backwards) at walking speed until shift is completed.
4. Verify proper position indication.
5. Accelerate normally.

In the case of a manual transmission, ease the clutch out in low gear, allowing the vehicle to “walk” until shift is completed.

Some possible exclusions to the Safe-T-Shift program are those vehicles fitted with a transfer case mounted PTO, OEM factory installations, and any with non-Marmon-Herrington transfer cases.

Marmon-Herrington

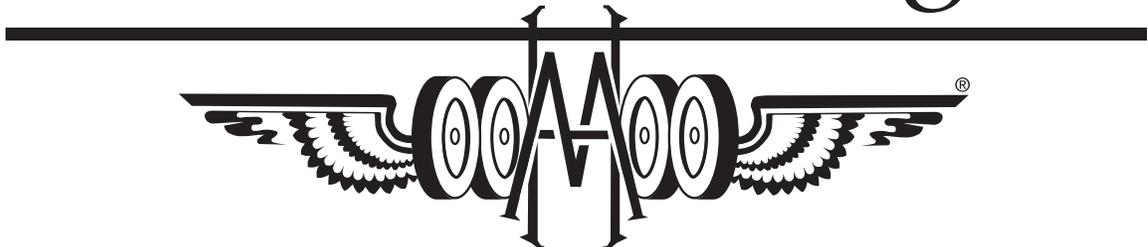

MARMON-HERRINGTON WARRANTY

This is to certify that we, Marmon-Herrington Company, Louisville, Kentucky, warrant each new chassis remanufactured, or assembly or part furnished for the remanufacture of a truck chassis against defects in material and workmanship under normal use and service. Marmon-Herrington's obligation under this warranty is limited to replacement of, at our factory, any part or parts thereof which shall, within one (1) year after delivery of such vehicle to the final user after installation of the all-wheel drive installation kit, be returned to us with transportation charges prepaid, and which our examination shall disclose to our satisfaction to have been thus defective.

Marmon-Herrington will warrant covered components against defects in material and workmanship under normal use and service for the specified period. This warranty includes all internal components with the following exceptions: Exceptions include, but are not limited to wear items such as brake linings and drums, oil seals and bearings, which will be covered for a period of 12 months or 12,000 miles, whichever ever occurs first.

Failure to follow designated maintenance procedures and schedules, maintain required lubrication levels, or any form of operational abuse or misuse will void all warranty coverage expressed or implied.

Failure reporting and claims submission procedures are to be followed as outlined in the standard warranty guidelines

Service parts are manufactured to the same standards as production installed parts. However, since the installation thereof, as well as the age and condition of the receiving vehicle are beyond the control of Marmon-Herrington, Service Parts are warranted for a period of ninety (90) days or five thousand (5,000) miles whichever first occurs. All other regular warranty conditions apply.

On vehicles operating OVERSEAS, the determination of defects will be made at Marmon-Herrington Company, Louisville, Kentucky, from complete information supplied in writing by overseas distributors or recognized acting distributors. Complete information is defined to mean: vehicle serial number, user's name, date of delivery, mileage at time of breakage, date of breakage, type of service, nature of break or fault, distributor's recommendation (for our guidance only), and any other pertinent information. After determination of our obligation, any parts to be replaced will be shipped to distributor or acting distributor in accordance with his instructions.

This warranty is in lieu of all other warranties expressed or implied and of all other obligations or liabilities incurred by Marmon-Herrington. Marmon-Herrington neither assumes nor authorizes any other person to assume any other liability in connection with this sale, including but not limited to indirect or consequential damages.

This warranty shall not apply to any vehicle which shall have been repaired or altered in any way so as in our judgment, to affect its stability or reliability, nor which has been subject to misuse, negligence, or accident, nor which shall have been operated at a speed exceeding the factory rated speed or loaded beyond the factory rated load capacity or operated in violation of Marmon-Herrington's instructions.

Marmon-Herrington makes no warranty whatever on components of the original manufacturer's chassis not related

to the modification work. Also, no warranty is made on tires, rims, ignitions, or other parts usually warranted separately by their respective manufacturers.

The manufacturers reserve the right to make changes in design, and changes or improvements upon their product, without notice, and without incurring any obligation to install such changes or improvements upon their products theretofore manufactured.

This warranty shall become effective only when the Warranty Certificate has been returned to Marmon-Herrington and validated by the same.

In the case of vehicles operating in extreme conditions such as corrosive material mines, deep- water zones or areas of hostile aggression, the following warranty limitations apply:

Marmon-Herrington shall not be responsible for damage caused by chemical corrosion, internal water damage due to total immersion, or explosive impact. These conditions constitute severe duty and are not covered by Marmon-Herrington standard warranty.

WARRANTY REPAIR AND CLAIM PROCEDURE

Initial Failure Reporting

1. Operator must call Marmon-Herrington Customer Service prior to performing any repairs and receive a Repair Authorization Number to be eligible for reimbursement. The work authorization number does not guarantee payment but is an acknowledgement that the vehicle is within the warranty period in terms of date and mileage, and that a claim has been activated. **It will be the responsibility of the operator to ensure that their repair facility is aware of, and complies with, the guidelines of this policy.**
2. To expedite the authorization process, you will need the Sales Order Number or "S" number found on the component I.D. tag. You will also need the Vehicle Identification Number or the last six digits of the "VIN", the date the vehicle was placed in service, and the current mileage. Please note the following:
 - This Warranty Registration should have been submitted at the time of delivery. If our records do not include a warranty registration, you must complete one before any authorization for repair can be issued. We will make them available by mail or fax upon request.
3. Marmon-Herrington will pre-approve .5 hours diagnosis/inspection time prior to your call for repair authorization. If the the diagnosis/inspection complaint does not reveal a warrantable failure, or result in a warrantable repair, the customer will be responsible for all charges including diagnosis/inspection time.
4. The Operators Manual contains information covering proper equipment use and maintenance schedules. Operators must adhere to these guidelines to be eligible for reimbursement, and service records must be provided upon request.

Pre-Repair Requirements

1. Authorization for repairs will require a written estimate/repair order of costs after determination that a warrantable condition is found to exist.

2. Estimates must contain the following information:
 - A list of all parts necessary for specific job and if applicable, all parts that will be invoiced back to Marmon-Herrington.
 - The cost of disassembly, inspection and diagnosis of any portion of the vehicle to determine extent of repairs needed.
 - Current labor costs, reflecting both hourly rate and number of hours to effect repairs must be listed.
 - Miscellaneous charges such as “shop supplies” must be defined. Actual dollar amounts must be listed, as percentages will not be accepted.
 - Sublet repairs must also be defined and included in the estimate at their actual dollar amount.
 - NOTE: If it becomes necessary to exceed the original estimate in terms of parts or labor, the repair facility must call Marmon-Herrington Customer Service for additional authorization.
3. Only the use of Marmon-Herrington supplied parts will constitute reimbursement unless prior approval has been obtained.

Parts Ordering

While Marmon-Herrington operates a full Service Parts Department, replacement parts needed to effect Warranty repairs must be acquired through Customer Service to be eligible for reimbursement.

Post Repair Requirements

The final invoice or work order must include the following:

- Customer’s name, address, and phone number.
- The Vehicle Identification number.
- The Sales Order Number or “S” number, which the customer can provide or can be located on the I.D. tag, fixed to the transfer case or axle.
- The Axle or Transfer Case Model and Serial Number, also located on the I.D. tag.
- Mileage In / Mileage Out.
- The Cause and Correction of the repair including detailed description of repairs and parts replaced.
- The date the repair order was open and the date the repairs were completed.
- The Work Authorization Number obtained from Customer Service.

Notes to Repair Facilities

1. Miscellaneous charges such as “shop supplies” must be listed as separate line items and shown on the final invoice as stated in “Pre-Repair Requirements.” Invoices for sublet repairs must be made available upon request.
2. All repairs must comply with any or all state and DOT requirements.
3. Downtime of vehicle and incurred costs associated due to the delay of parts shipments or any other condition beyond our control is not reimbursable and should not be listed on the invoice.
4. All failed parts that are required to be returned to Marmon-Herrington must be received before payment will be made. The Return Authorization will be sent with the replacement parts when shipped from Marmon-Herrington.
5. All Claims must be submitted within 60 days of completion of repairs to be eligible for reimbursement.

For Work Authorization call: (800) 227-0727, Ext. 282
 To Submit Claims by Fax: (502) 253-0317

Submit Claims by Mail to:
 Marmon-Herrington Company, Customer Service Department,
 13001 Magisterial Drive, Louisville, KY 40223.

REPLACEMENT PARTS

When ordering replacement parts for **MARMON-HERRINGTON** installations, the following information should be given:

1. **FACTORY ORDER NUMBER** (found on I.D. Plate or small plate affixed to axle housing). This will be a six (6) digit number. (See illustrations this page.)
2. Component for which parts are required, i.e. front drive axle or transfer case/drop box.
3. Model of axle and/or transfer case/drop box, i.e. MT10, MVG 750, MDB500.
4. Give quantity and part number required. **NOTE:** Drivelines, shift linkage, etc., can be found on the computer printout of Bill of Material, which is included in the Service Manual.
5. Give complete billing and shipping address.

CALL IN PROCEDURE

Before proceeding with repairs or ordering parts that you feel may be covered under warranty, you must first contact Marmon-Herrington Customer Service Department to obtain a Repair Authorization Number.

(800) 227-0727, Ext. 282 8am-5pm EST
 (502) 693-1129 5pm-8pm EST

Please be prepared to supply the following information:

Factory Order Number or “S-Number” This is located on an I.D. plate fixed to either the driver’s door panel or the component (axle or transfer case) itself. This plate will also show the component’s model and serial number. Example: S-7777-05

Component Model and Serial Number

Vehicle Year, Make and Model

Vehicle Identification Number

Mileage

In Service Date

Please refer to our website (www.marmon-herrington.com) for the latest versions of our parts and service manuals, as well as new products and contact information.


The information necessary for replacement parts and/or warranty claim procedures will be found on either plate design.

| | | |
|--------------------------|---------|-------|
| MARMON-HERRINGTON | | |
| SALES ORDER | 0000-00 | RATIO |
| S/N | | TYPE |
| CUST P/N | | |

| | | |
|--|---------|------|
| MARMON-HERRINGTON | | |
| SALES ORDER | 0000-00 | |
| S/N | | TYPE |
| CUST P/N | | |
| COVERED BY ONE OR MORE OF THE FOLLOWING PATENTS: U.S. PATENTS 4,878,691; 4,934,733; 5,016,912; 5,275,430; 5,839,750; AND 6,398,251; AND CA PATENT 1,316,185. OTHER U.S. AND FOREIGN PATENTS PENDING. | | |


| | |
|---|---------|
| MARMON-HERRINGTON | |
|  | |
| ALL-WHEEL DRIVE LOUISVILLE, KENTUCKY U.S.A. | |
| FACTORY ORDER NO. | 0000-00 |
| INSTALLED BY | |
| FRONT DRIVING AXLE | |
| MODEL | |
| CAPACITY | |
| SERIAL NO. | |
| RATIO | |
| TRANSFER CASE | |
| MODEL | |
| SERIAL NO. | |

DIFFERENTIAL CARRIER HOUSING MT22/R/N/H

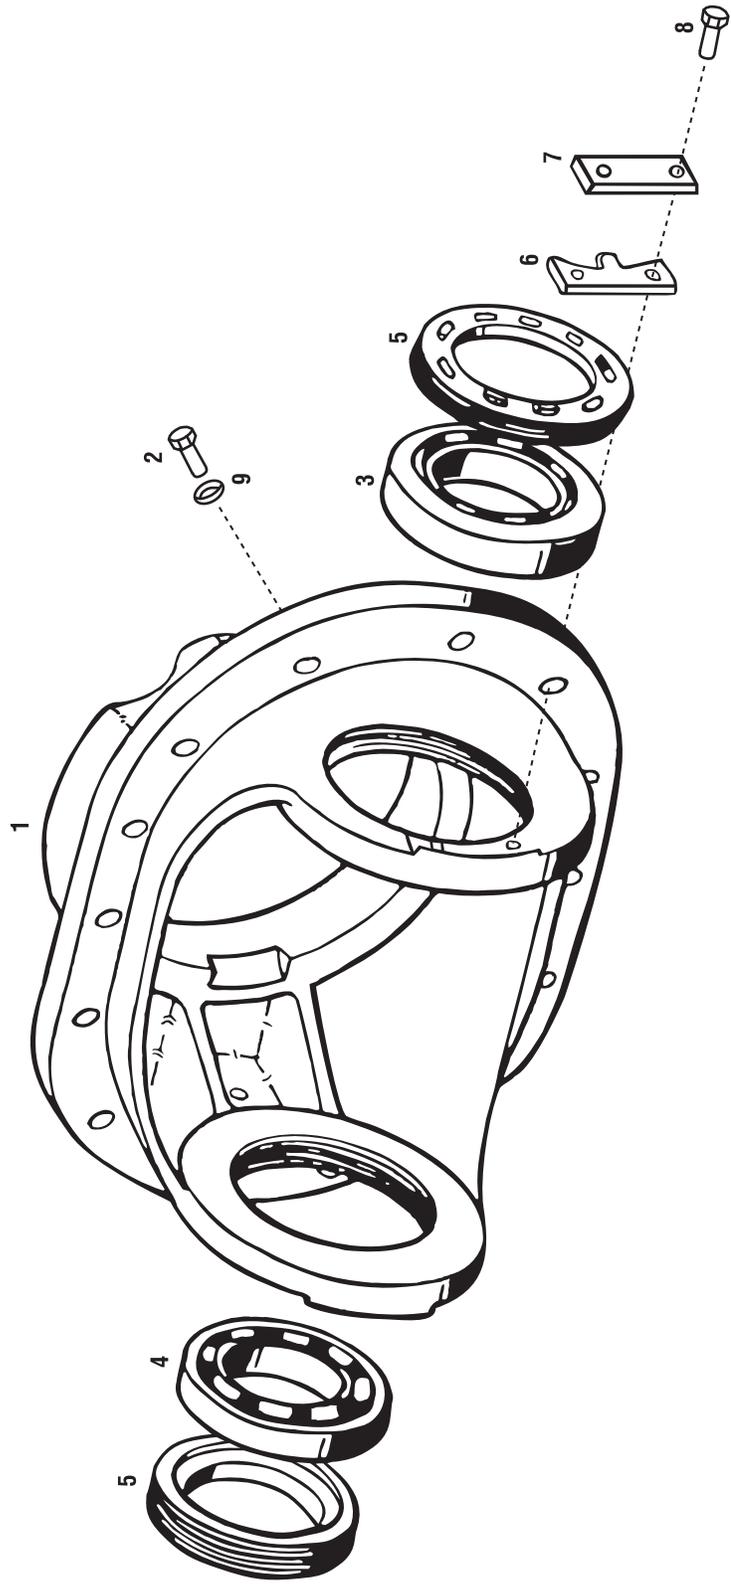

Marmon-Herrington


DIFFERENTIAL MT22/R/N/H

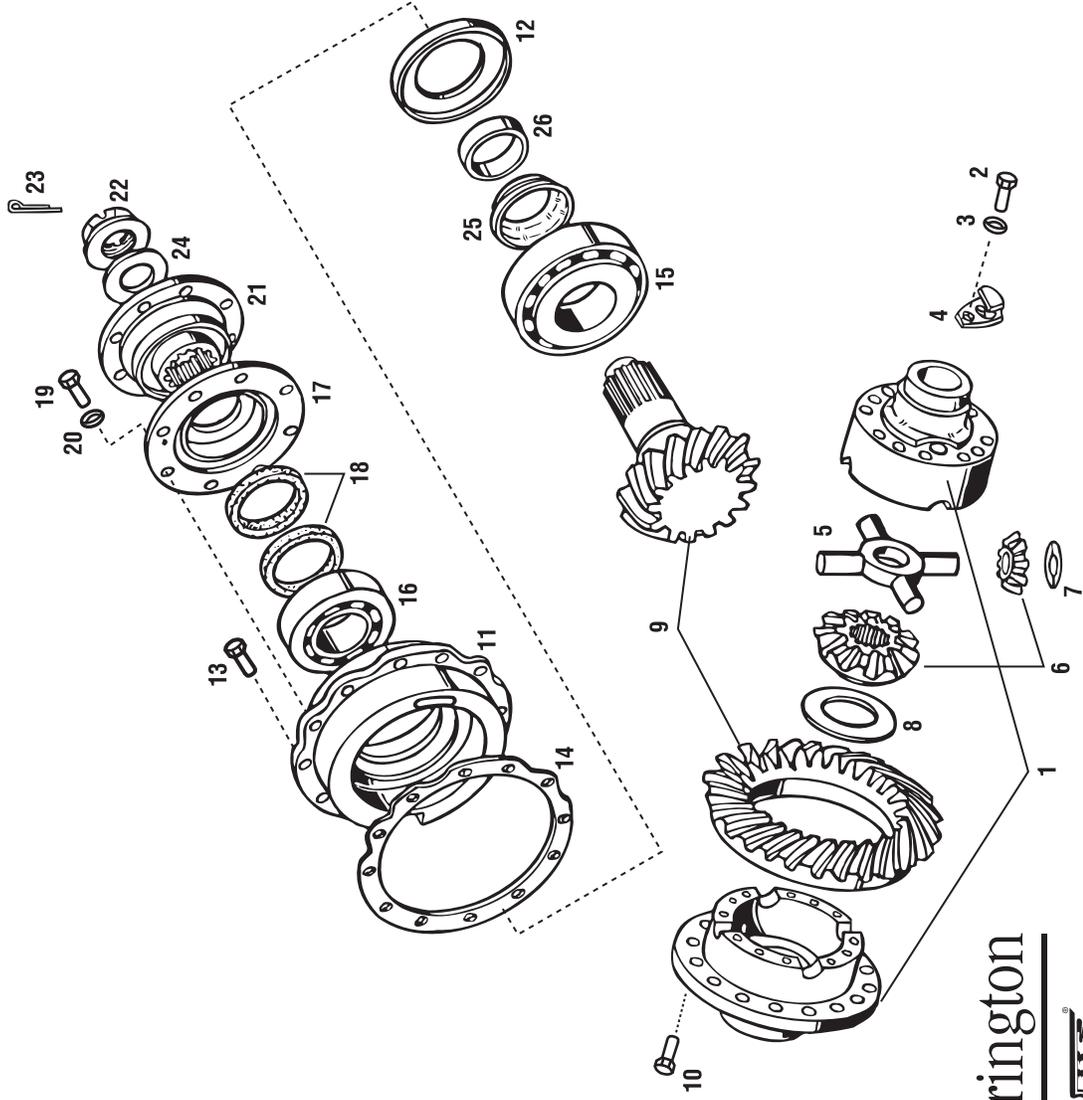


Marmon-Herrington




| COMPLETE CARRIER ASSEMBLY | | | | | | | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|---------------------------|--------------------------|-------------|-------------------|--|--|--|----------|--|---------------------------------|-----------|
| CARRIER P/N | PINION & RING GEAR RATIO | FINAL RATIO | DIFFERENTIAL CASE | | | | | | | |
| MT22-1001 | 1.227 | 4.25 | MT22-1051 | | | | 10 | MT22-1250 | Flanged S/L Ring Gear Bolt | 16 |
| MT22-1002 | 1.318 | 4.56 | MT22-1051 | | | | 11 | MT22-1068 | Bearing Cage Assy. | 1 |
| MT22-1003 | 1.422 | 4.92 | MT22-1052 | | | | 12 | MT14-1078 | Oil Baffle Plate | 1 |
| MT22-1004 | 1.526 | 5.29 | MT22-1052 | | | | 13 | MT22-1077 | Flanged Bolt, Special | 12 |
| MT22-1010 | 1.553 | 5.38 | MT22-1052 | | | | 14 | MT22-1067A | Shim, 1.0 MM | AR |
| MT22-1005 | 1.632 | 5.65 | MT22-1052 | | | | | MT22-1067B | Shim, .50 MM | AR |
| MT22-1014 | 1.684 | 5.83 | MT22-1052 | | | | | MT22-1067C | Shim, .30 MM | AR |
| MT22-1013 | 1.765 | 6.11 | MT22-1052 | | | | | MT22-1067D | Shim, .25 MM | AR |
| MT22-1006 | 1.812 | 6.27 | MT22-1052 | | | | 15 | MT22-1067E | Shim, .20 MM | AR |
| MT22-1007 | 1.929 | 6.68 | MT22-1052 | | | | 16 | MT14-1075 | Pinion Bearing, Inner | 1 |
| MT22-1008 | 2.077 | 7.14 | MT22-1445 | | | | 17 | MT14-1079 | Pinion Bearing, Outer | 1 |
| MT22-1009 | 2.231 | 7.72 | MT22-1445 | | | | 18 | MT22-1070 | Cover | 1 |
| MT22-1011 | 2.415 | 8.36 | MT22-1445 | | | | 19 | MT22-1069 | Oil Seal Kit, Pinion | 1 |
| MT22-1012 | 2.462 | 8.52 | MT22-1445 | | | | 20 | 11500713 | Hex Bolt, M8 X 22 | 8 |
| | | | | | | | 21 | 11500191 | Flat Lock Washer, M8 | 8 |
| | | | | | | | 22 | MT17-1050 | Companion Flange, 1610 Series | 1 |
| | | | | | | | 23 | MT22-1073 | Companion Flange, 1710 Series | 1 |
| | | | | | | | 24 | MT22-1075 | Pinion Lock Nut, 1991 and Older | 1 |
| | | | | | | | 25 | MT14-1082 | Pinion Castle Nut | 1 |
| | | | | | | | 26* | 103422 | Cotter Pin | 1 |
| | | | | | | | | MT22-1074 | Washer, Special | 1 |
| | | | | | | | | MT14-1076 | Distance Sleeve | 1 |
| | | | | | | | | MT14-1077A | Bearing Distance Ring, 6.90 MM | AR |
| | | | | | | | | MT14-1077B | Bearing Distance Ring, 7.00 MM | AR |
| | | | | | | | | MT14-1077C | Bearing Distance Ring, 7.02 MM | AR |
| | | | | | | | | MT14-1077D | Bearing Distance Ring, 7.04 MM | AR |
| | | | | | | | | MT14-1077E | Bearing Distance Ring, 7.06 MM | AR |
| | | | | | | | | MT14-1077F | Bearing Distance Ring, 7.08 MM | AR |
| | | | | | | | | MT14-1077G | Bearing Distance Ring, 7.10 MM | AR |
| | | | | | | | | MT14-1077H | Bearing Distance Ring, 7.20 MM | AR |
| | | | | | | | | MT14-1077I | Bearing Distance Ring, 7.32 MM | AR |
| | | | | | | | | MT14-1077J | Bearing Distance Ring, 7.44 MM | AR |
| | | | | | | | | MT14-1077K | Bearing Distance Ring, 7.56 MM | AR |
| | | | | | | | | MT14-1077L | Bearing Distance Ring, 7.68 MM | AR |
| | | | | | | | | MT14-1077M | Bearing Distance Ring, 7.80 MM | AR |
| | | | | | | | | MT14-1077N | Bearing Distance Ring, 7.92 MM | AR |
| | | | | | | | | AR = As Required | | |
| | | | | | | | | *Note: Choose 2 to produce proper bearing preload. | | |


DIFFERENTIAL CARRIER HOUSING MTL22

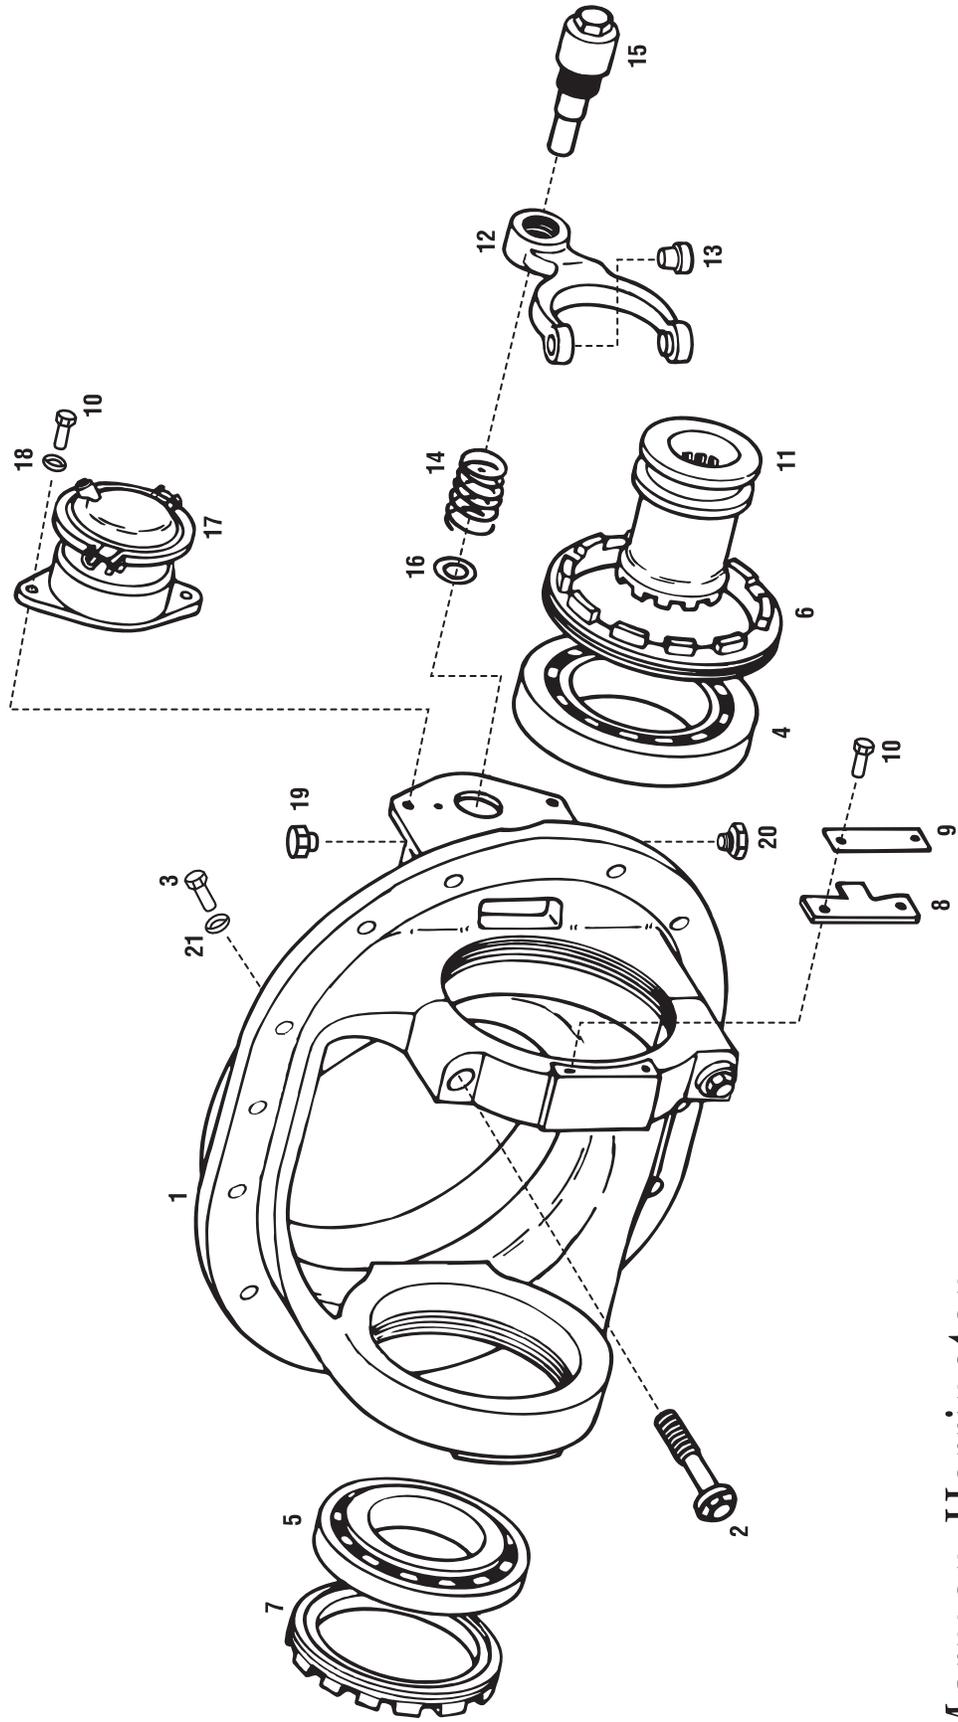

Marmon-Herrington



DIFFERENTIAL MTL22

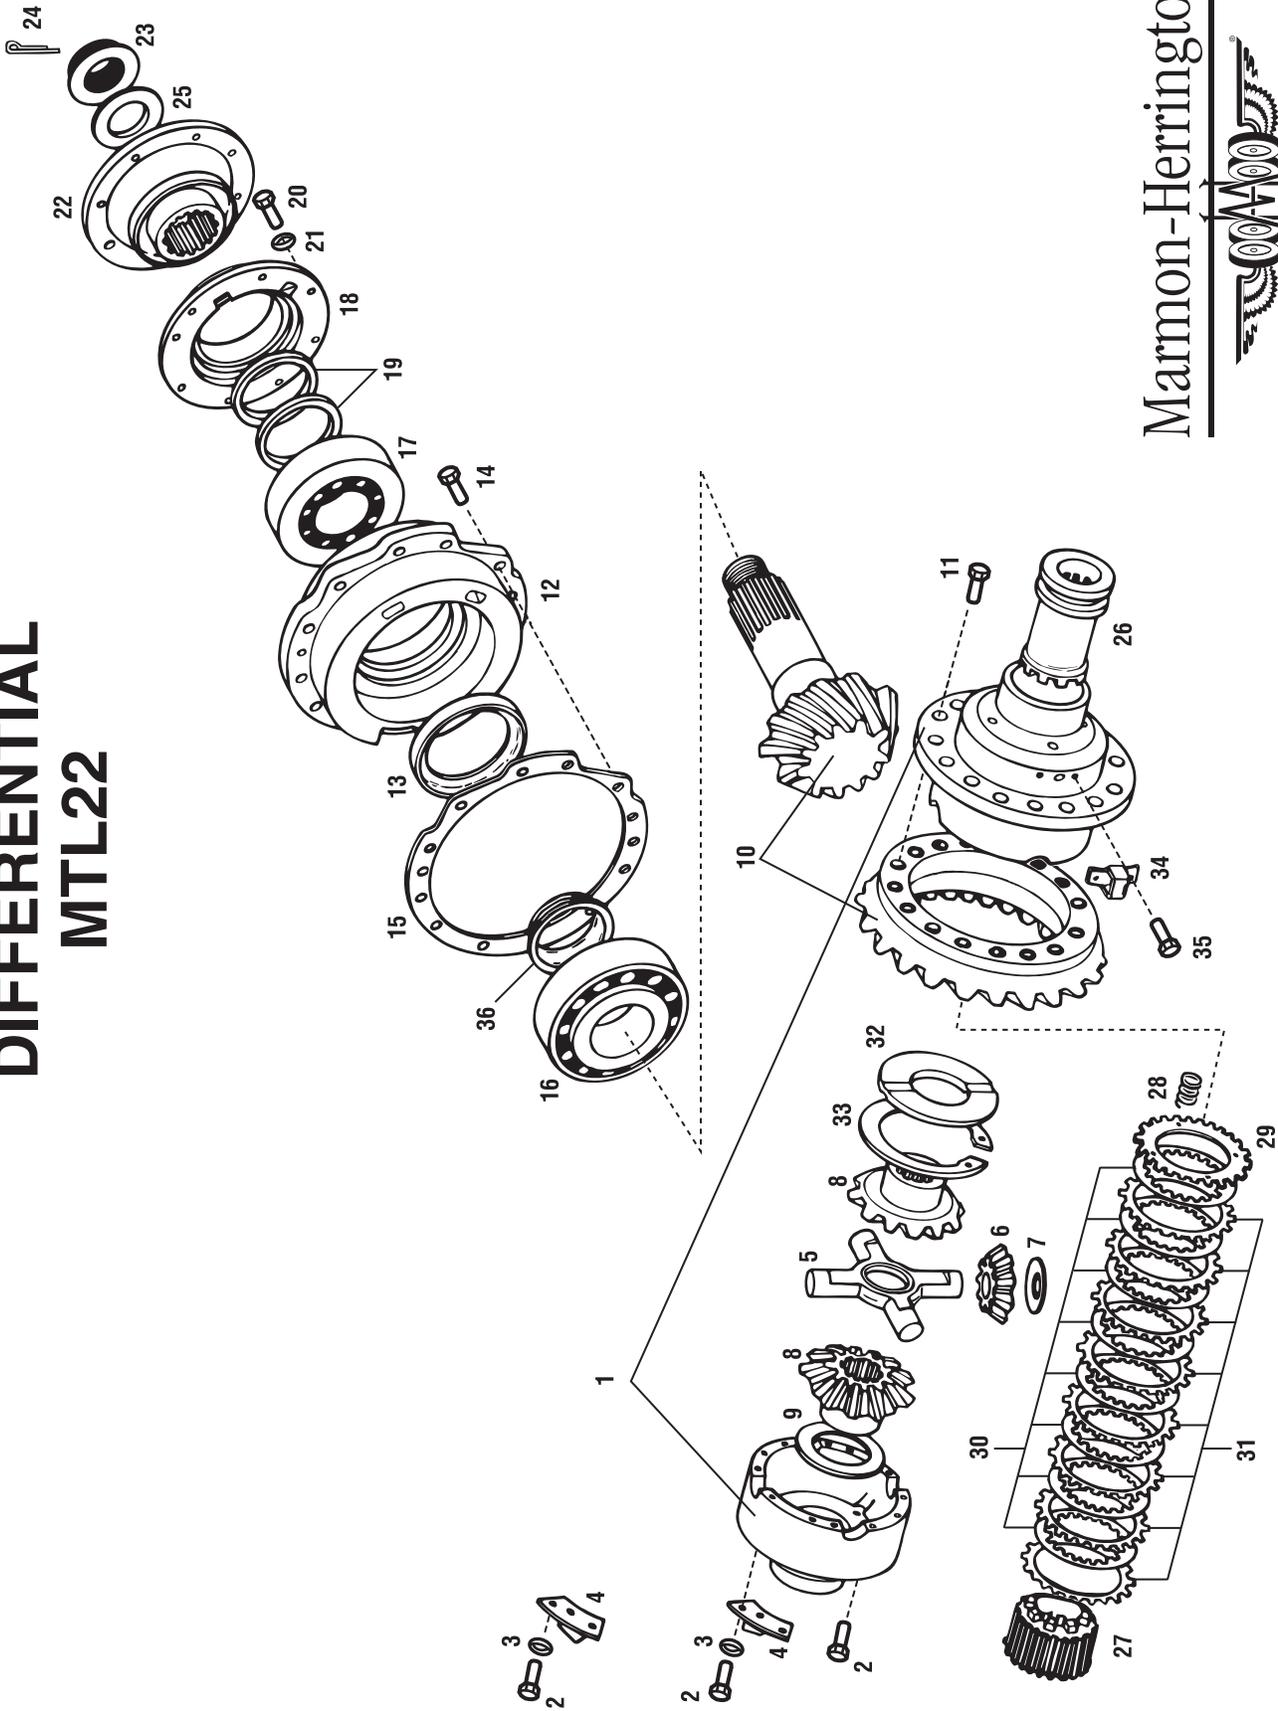

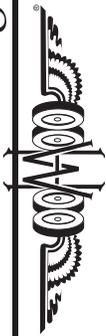Marmon-Herrington


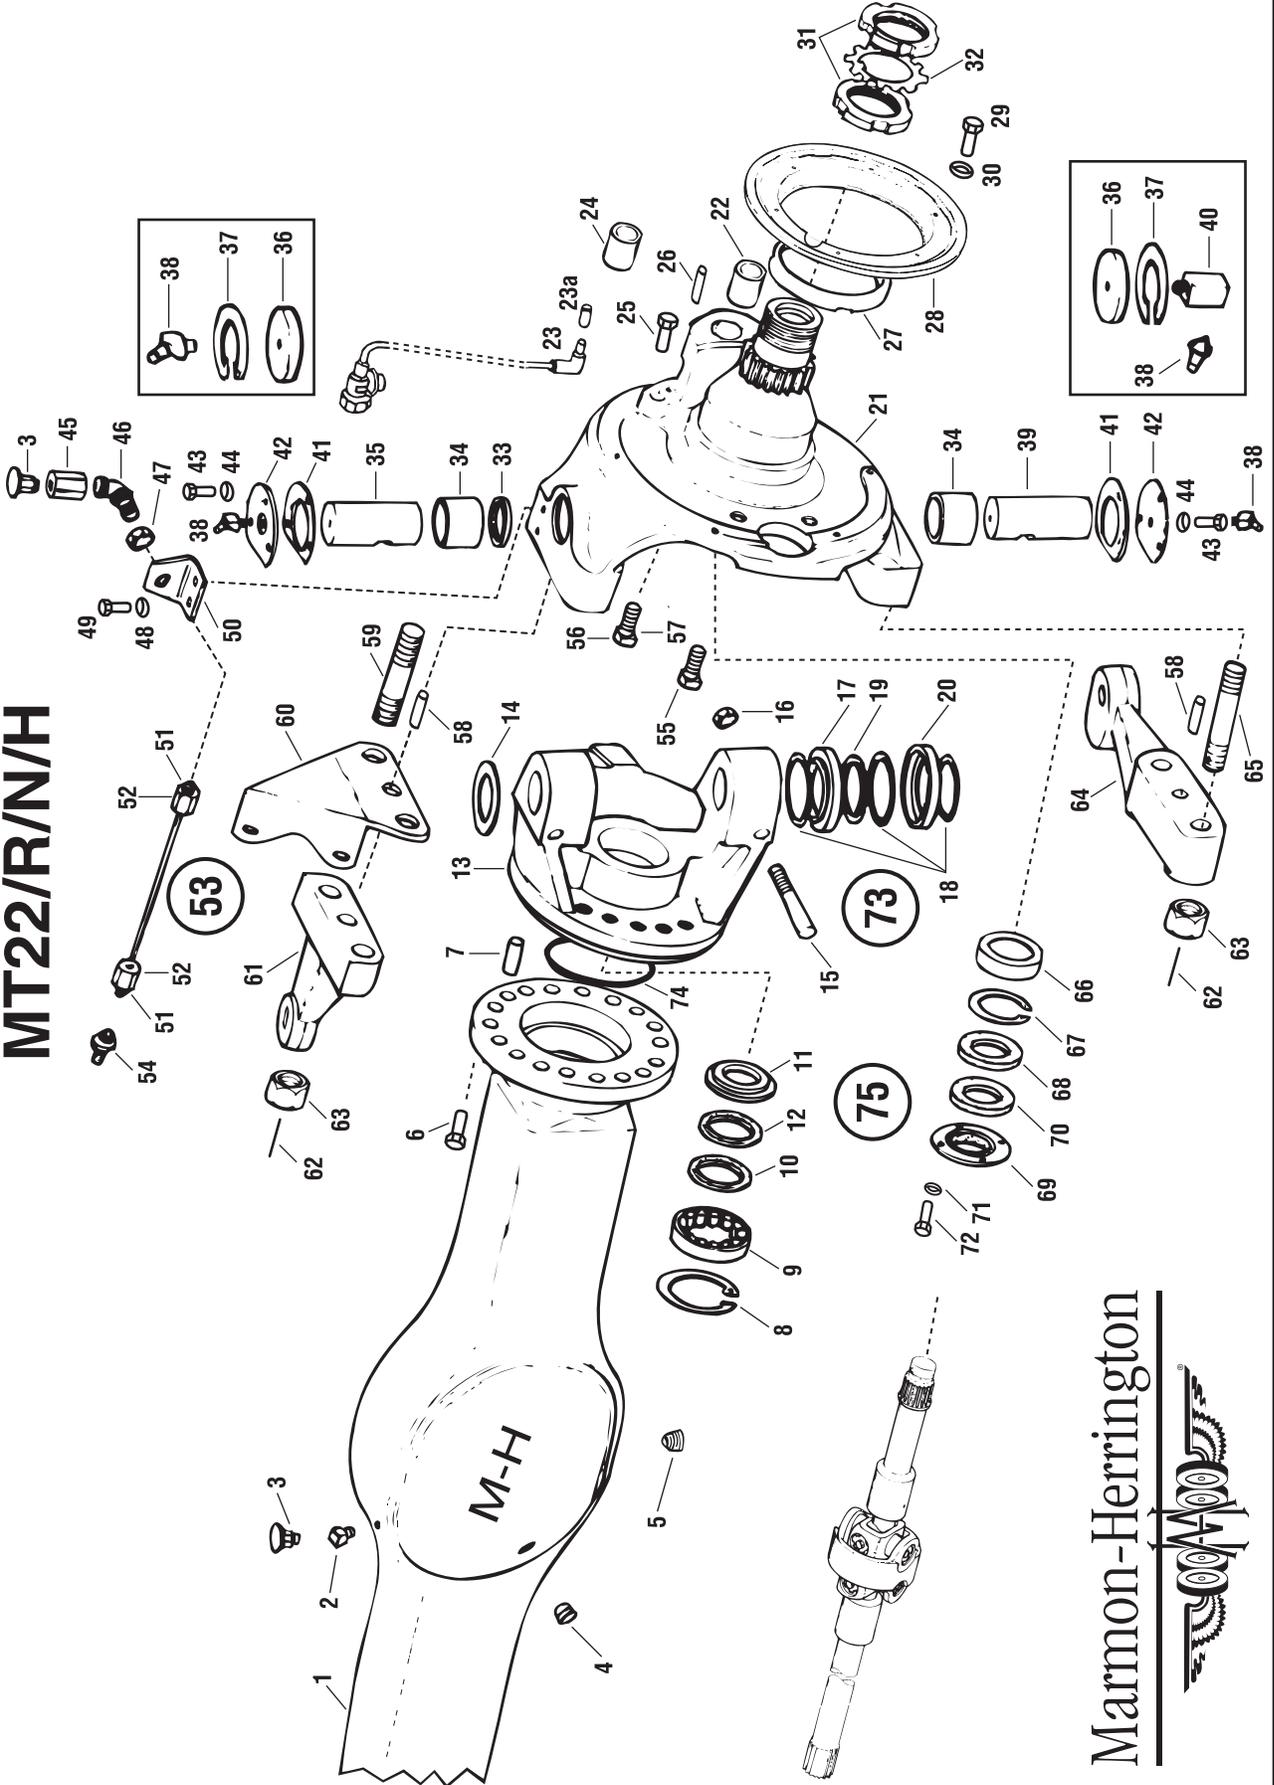
| COMPLETE CARRIER ASSEMBLY | | | | | | | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|---------------------------|--------------------------|-------------|-------------------|----------|-------------|--|-----------|-------------|-------------|-----------|
| CARRIER P/N | PINION & RING GEAR RATIO | FINAL RATIO | DIFFERENTIAL CASE | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | | | |
| MTL17-1001 | 1.227 | 4.25 | MTL17-1022 | 16 | MT14-1075 | Pinion Bearing, Inner | 1 | | | |
| MTL17-1002 | 1.318 | 4.56 | MTL17-1022 | 17 | MT14-1079 | Pinion Bearing, Outer | 1 | | | |
| MTL17-1003 | 1.422 | 4.92 | MTL17-1023 | 18 | MT22-1070 | Cover | 1 | | | |
| MTL17-1004 | 1.526 | 5.29 | MTL17-1023 | 19 | MT22-1069 | Oil Seal Kit, Pinion | 1 | | | |
| MTL17-1010 | 1.553 | 5.38 | MTL17-1023 | 20 | 11500713 | Hex Bolt, M8x20-1.25 | 8 | | | |
| MTL17-1005 | 1.632 | 5.65 | MTL17-1023 | 21 | 11500191 | Lock Washer, M8 | 8 | | | |
| MTL17-1014 | 1.684 | 5.83 | MTL17-1023 | 22 | MT22-1073 | Companion Flange, 1710 Series | 1 | | | |
| MTL17-1013 | 1.765 | 6.11 | MTL17-1023 | 23 | MT14-1082 | Pinion Castle Nut, M42x1.5 | 1 | | | |
| MTL17-1006 | 1.812 | 6.27 | MTL17-1023 | 24 | 103422 | Cotter Pin | 1 | | | |
| MTL17-1015 | 1.929 | 6.68 | MTL17-1023 | 25 | MT22-1074 | Washer, Special | 1 | | | |
| | | | | 26 | MTL17-1027 | Clutch Sleeve | 1 | | | |
| | | | | 27 | MTL17-1028 | Toothed Hub | 1 | | | |
| | | | | 28 | MTL17-1029 | Spring | 12 | | | |
| | | | | 29 | MTL17-1030 | Backing Disk | 1 | | | |
| | | | | 30 | MTL22-1053 | Inner Clutch Plate | 13 | | | |
| | | | | 31 | MTL22-1052 | Outer Clutch Plate | 13 | | | |
| | | | | 32 | MTL17-1032 | Differential Side Washer | 1 | | | |
| | | | | 33 | MTL17-1033 | Lock Ring | 1 | | | |
| | | | | 34 | MTL17-1034 | Oil Scoop | 2 | | | |
| | | | | 35 | MTL17-1035 | Countersunk Screw | 2 | | | |
| | | | | 36 | | Pinion Bearing Spacer:* | | | | |
| | | | | | | MT22-1400 | 34.225 MM | MT22-1417 | 33.800 MM | |
| | | | | | | MT22-1401 | 34.200 MM | MT22-1418 | 33.775 MM | |
| | | | | | | MT22-1402 | 34.175 MM | MT22-1419 | 33.750 MM | |
| | | | | | | MT22-1403 | 34.150 MM | MT22-1420 | 33.725 MM | |
| | | | | | | MT22-1404 | 34.125 MM | MT22-1421 | 33.700 MM | |
| | | | | | | MT22-1405 | 34.100 MM | MT22-1422 | 33.675 MM | |
| | | | | | | MT22-1406 | 34.075 MM | MT22-1423 | 33.650 MM | |
| | | | | | | MT22-1407 | 34.050 MM | MT22-1424 | 33.625 MM | |
| | | | | | | MT22-1408 | 34.025 MM | MT22-1425 | 33.600 MM | |
| | | | | | | MT22-1409 | 34.000 MM | MT22-1426 | 33.575 MM | |
| | | | | | | MT22-1410 | 33.975 MM | MT22-1427 | 33.550 MM | |
| | | | | | | MT22-1411 | 33.950 MM | MT22-1428 | 33.525 MM | |
| | | | | | | MT22-1412 | 33.925 MM | MT22-1429 | 33.500 MM | |
| | | | | | | MT22-1413 | 33.900 MM | MT22-1430 | 33.475 MM | |
| | | | | | | MT22-1414 | 33.875 MM | MT22-1431 | 33.450 MM | |
| | | | | | | MT22-1415 | 33.850 MM | MT22-1432 | 33.425 MM | |
| | | | | | | MT22-1416 | 33.825 MM | MT22-1433 | 33.400 MM | |
| | | | | | | AR = As Required | | | | |
| | | | | | | *Note: As Required. Choose 1 to produce proper bearing preload. | | | | |

DIFFERENTIAL LOCK AIR CHAMBER MTL22

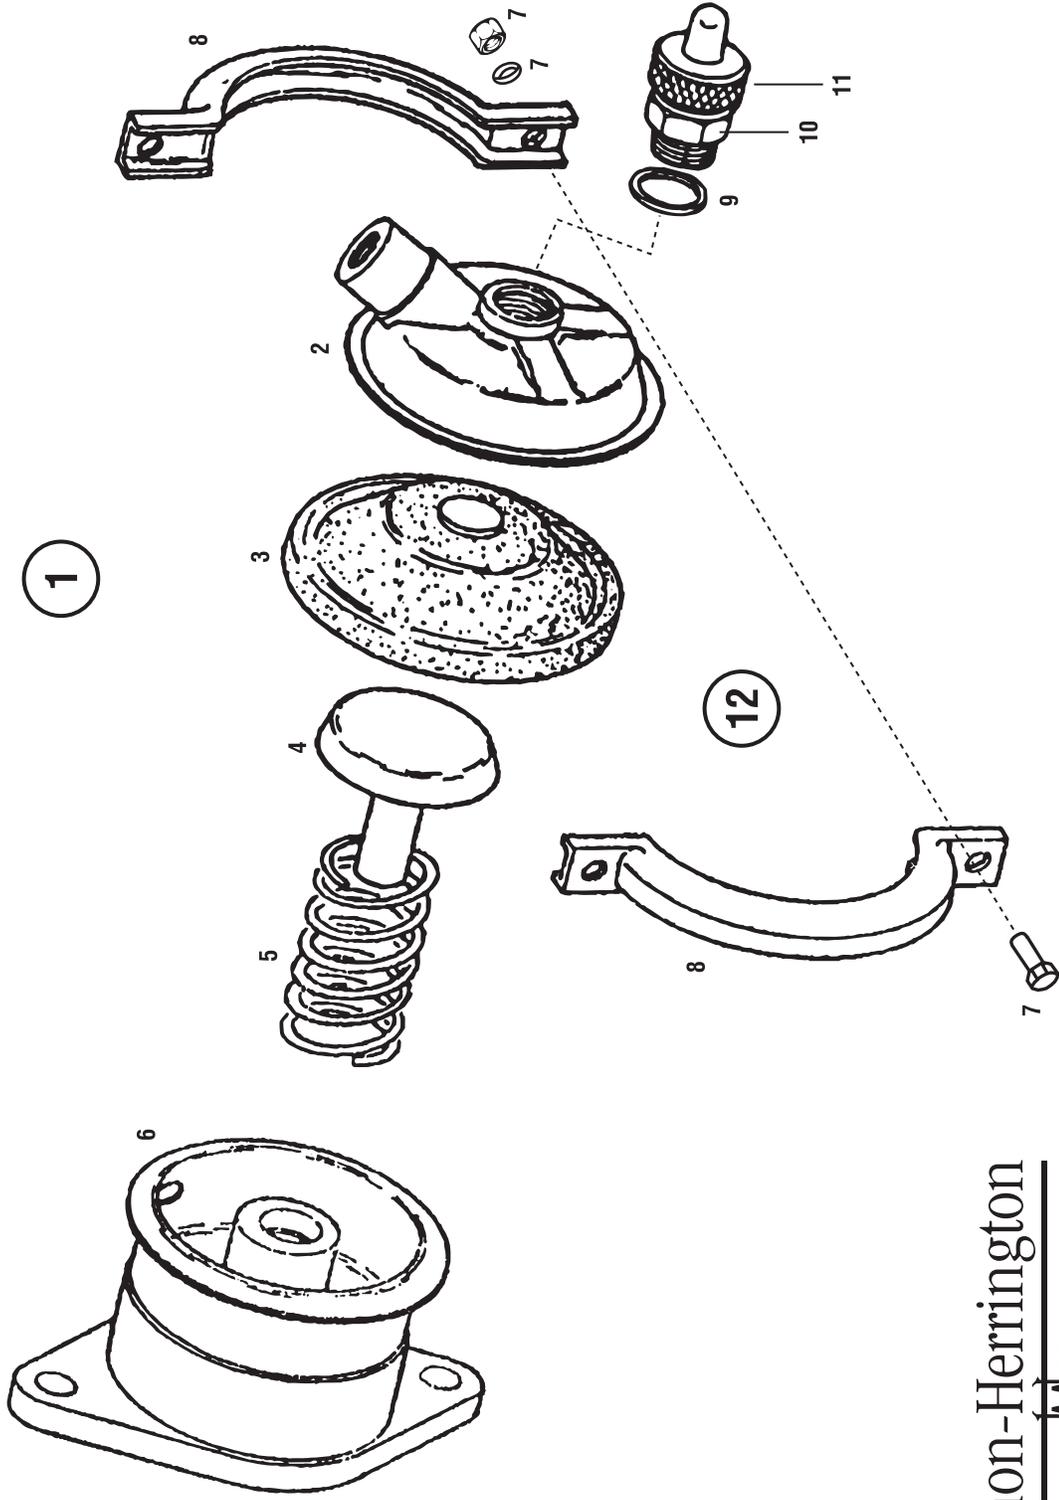

Marmon-Herrington


AXLE HOUSING MT22/R/N/H



Marmon-Herrington


| ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|----------|-------------|---|-----------|----------|-------------|--|-----------|
| 1 | MT22-1083 | Axle Housing (MT22 Only) | 1 | 37 | MT22-1109 | Snap Ring 1991 and older | 4 |
| 2 | MT22R-1038 | Axle Housing (MT22R/N/H Only) | 1 | 38 | 271285 | Grease Fitting 45° | 4 |
| | MT22-1214 | Vent Extension | 1 | 39 | MT22-1111 | Trunnion Pin, Lower (Long) | 2 |
| 3 | MT14-1068 | Vent | 3 | 40 | MT22-1113 | Adapter | 2 |
| 4 | MT14-1070 | Fill Plug | 1 | 41 | MT22-1108G | Trunnion Cover Gasket MT22N/H | 4 |
| 5 | MT14-1071 | Drain Plug, Magnetic | 1 | 42 | MT22-1108A | Trunnion Cover MT22N/H | 4 |
| 6 | MT22-1084 | Hex Bolt, Special | 36 | 43 | 11500713 | Bolt M8 X 20 - 1.25 | 12 |
| 7 | MT14-1222 | Dowel Pin | 2 | 44 | 11500191 | Lock Washer M8 | 12 |
| 8 | MT22-1087 | Snap Ring | 2 | 45 | MT22-1139 | Adapter Fitting | 2 |
| 9 | MT22-1088 | Roller Bearing, Axle Shaft, Inner | 2 | 46 | MT22-1138 | Elbow Fitting, Vent | 2 |
| 10 | MT22-1089 | Oil Seal, Axle Shaft, Inner See item 75 | 2 | 47 | MT22-1140 | Jam Nut | 2 |
| 11 | MT22-1090 | Seal Holder See item 75 | 2 | 48 | 11500192 | Lock Washer, M10 | 4 |
| 12 | MT22-1090F | Felt Wiper See item 75 | 2 | 49 | 11500778 | Hex Bolt, M10 X 25 | 4 |
| 13 | MT22-1085 | Yoke Housing, L.H. | 1 | 50 | MT22-1135 | Bracket, Vent, L.H. | 1 |
| | MT22-1086 | Yoke Housing, R.H. (Not Shown) | 1 | 51 | MT22-1136 | Bracket, Vent, R.H. (Not Shown) | 1 |
| 14 | MT22-1091A | Shim, Trunnion, 1.00 MM | AR | 51 | MT22-1141 | Retaining Ring | 4 |
| | MT22-1091B | Shim, Trunnion, 1.20 MM | AR | 52 | MT22-1142 | Union Nut | 4 |
| | MT22-1091C | Shim, Trunnion, 0.40 MM | AR | 53 | MT22-1143A | Tube Vent, L.H. (Includes Items #51 and 52) | 1 |
| | MT22-1091D | Shim, Trunnion, 0.60 MM | AR | 53 | MT22-1143B | Tube Vent, R.H. (Includes Items #51 and 52) | 1 |
| | MT22-1091E | Shim, Trunnion, 1.40 MM | AR | 54 | MT22-1144 | Pipe Fitting | 2 |
| 15 | MT22-1092 | Lock Pin | 4 | 55 | MT22-1110 | Bolt M20 X 60 - 1.5 | 2 |
| 16 | MT22-1093 | Hex Nut, Fine Thread, M16 X 1.5 | 4 | 56 | MT22-1125 | Bolt, Turn Stop M20 X 47 - 1.5 | 2 |
| 17 | MT22-1097 | Bearing Case, Upper See item 73 | 2 | 57 | MT93-5854 | Bolt, Turn Stop M20 X 80 - 1.5 | 2 |
| 18 | MT22-1095 | O Ring | 2 | 57 | MT22-1126 | Hex Nut, Special | 2 |
| 19 | MT22-1096 | Thrust Disk | 2 | 58 | MT22-1103 | Dowel Pin | 4 |
| 20 | MT22-1094 | Bearing Case, Lower See item 73 | 2 | 59 | MT22-1127 | Stud, Steering Arm | 4 |
| 21 | MT22-1098 | Knuckle - Spindle Assy, L.H. Obsolete | 1 | 60 | MT22-1128 | Brake Chamber Bracket, L.H. | 1 |
| | MT22-1099 | Knuckle - Spindle Assy, R.H. (Not Shown) (OBS) | 1 | 60 | MT22-1129 | Brake Chamber Bracket, R.H. | 1 |
| 21a | MT22R-1098 | Knuckle Assy, L.H. (MT22R Only) (OBS) | 1 | 61 | MT22-1130 | Steering Arm, L.H. | 1 |
| | MT22R-1099 | Knuckle Assy, R.H. (MT22R Only) (OBS) | 1 | 61 | MT22-1131 | Steering Arm, R.H. (Not Shown) | 1 |
| 21b | MT22N-1098 | Knuckle Assy, L.H. (MT22N Only) /H | 1 | 62 | 85T23 | Lock Wire | AR |
| | MT22N-1099 | Knuckle Assy, R.H. (MT22N Only) /H | 1 | 63 | MT22-1124 | Castle Nut | 8 |
| 22 | MT22-1082 | Pin, Brake Shoe (MT22/R Only) | 2 | 64 | MT22-1120 | Tie Rod Arm, L.H. | 1 |
| 23 | MT93-1282 | ABS Sensor (Wabco) | 2 | 64 | MT22-1320 | Tie Rod Arm, L.H. (0000, 11, 06) | 1 |
| | MT93-2035 | ABS Sensor (Bendix) | 2 | 64 | MT22-1121 | Tie Rod Arm, R.H. (Not Shown) | 1 |
| 23a | MT93-1283 | Sensor Spring Clip | 2 | 64 | MT22-1321 | Tie Rod Arm, R.H. (Not Shown) (0000, 11, 06) | 1 |
| 24 | MT22-1241 | Bushing, Brake Shoe Pin (MT22N Only) | 4 | 65 | MT22-1122 | Stud, Tie Rod Arm | 4 |
| 25 | MT22-1105 | Hex Bolt, Special | 4 | 65 | MT22-1127 | Stud, Steering Arm/Tie Rod Arm (0000, 11, 06) | 4 |
| 26 | MT22-1106 | Dowel Pin | 4 | 66 | MT22-1114 | Roller Bearing, Axle Shaft, Outer | 2 |
| 27 | MT22-1104 | Wear Sleeve Hub Seal (MT22 Only) 1991 and older | 2 | 67 | MT22-1115 | Snap Ring | 2 |
| 28 | MT22-1176 | Dust Shield | 2 | 68 | MT22-1116 | Oil Seal, Axle Shaft, Outer | 2 |
| 29 | 11500773 | Hex Bolt, M8 X 16 | 12 | 69 | MT22-1117 | Dust Shield, Axle Shaft includes item 70 | 2 |
| 30 | 11500191 | Lock Washer, M8 | 12 | 70 | MT10-1080 | Felt | 2 |
| 31 | MT22-1132 | Nut, Wheel Bearing | 4 | 71 | 11500190 | Lock Washer, M6 | 8 |
| 32 | MT22-1133 | Lock Ring, Wheel Bearing | 2 | 72 | 11503946 | Hex Bolt, M6 X 12 | 8 |
| 33 | MT22-1101 | Oil Seal, Trunnion Pin | 2 | 73 | MT22-1215 | Thrust Bearing Kit (Incl. Items #17, 18, 19, 20) | 2 |
| 34 | MT22-1102 | Trunnion Pin Bushing | 4 | 74 | MT22-1285 | O-Ring (119 X 5) | 2 |
| 35 | MT22-1107 | Trunnion Pin, Upper (Short) | 2 | 75 | MT22-1205 | Seal Holder Assembly (Incl. Items #10, 11, 12) | 2 |
| 36 | MT22-1108 | Cover, Trunnion Pin 1991 and older | 4 | | | AR = As Required | |


AXLE HOUSING — MT22/R/N/H

| ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|----------|-------------|--|-----------|----------|-------------|-------------|-----------|
| 1 | MT22-1146 | Axle Shaft Assy., Complete (MT22 Only) 1991 and older | 2 | | | | |
| | MT22R-1177 | Axle Assy., Short Spline (MT22R/N/H Only)* Replaced by MT221206 | 1 | | | | |
| | MT22R-1178 | Axle Assy., Long Spline (MT22R/N/H Only)* Replaced by MT221207 | 1 | | | | |
| | MT22-1206 | Axle Shaft Assy., Short Spline** See page 20 | 1 | | | | |
| | MT22-1207 | Axle Shaft Assy., Long Spline** See page 20 | 1 | | | | |
| 2 | MT22-1147 | Double Cardan Steering Joint* (OBS) | 2 | | | | |
| 3 | MT22-1148 | Outer Axle Shaft* (OBS) | 2 | | | | |
| 4 | MT22-1149 | Inner Axle Shaft (MT22 Only)* (OBS) | 2 | | | | |
| | MT22R-1145 | Axle Shaft Inner, Short Spline (MT22R/N/H Only)* (OBS) | 1 | | | | |
| | MT22R-1149 | Axle Shaft Inner, Long Spline (MT22R/N/H Only)* (OBS) | 1 | | | | |
| 5 | MT22-1225 | Couple Housing, Cardan Joint* (OBS) | 2 | | | | |
| 6 | MT22-1226 | Cross Shaft* (OBS) | NSS | | | | |
| 7 | MT22-1227 | Bearing Cup Assy., Cross Shaft* (OBS) | NSS | | | | |
| 8 | MT22-1228 | Snap Ring* | 16 | | | | |
| 9 | MT22-1229 | Plug, Bearing Cup, M12 X 1.5* (OBS) | 16 | | | | |
| 10 | MT22-1230 | Pin, Axle Shaft* (OBS) | NSS | | | | |
| 11 | MT22-1231 | Set Screw, Axle Pin* (OBS) | 4 | | | | |
| 12 | MT22-1232 | Bearing Cup Assy., Axle Pin* (OBS) | NSS | | | | |
| 13 | MT10-1134 | Cardan Steering Joint Kit* (OBS) (Includes Items #7, 8, 9, 10, 11, 12) | 4 | | | | |
| | | | | | | | |
| | | NSS = Not Sold Separately | | | | | |
| | | * Fits axles with serial #9999-05-02 or less. | | | | | |
| | | ** Fits all MT22R/N/H axles. | | | | | |
| | | | | | | | |


**AXLE SHAFT ASSEMBLY
 MT22/R/N/H**


AXLE SHAFT ASSEMBLY MT22/H/N

2005 and Newer

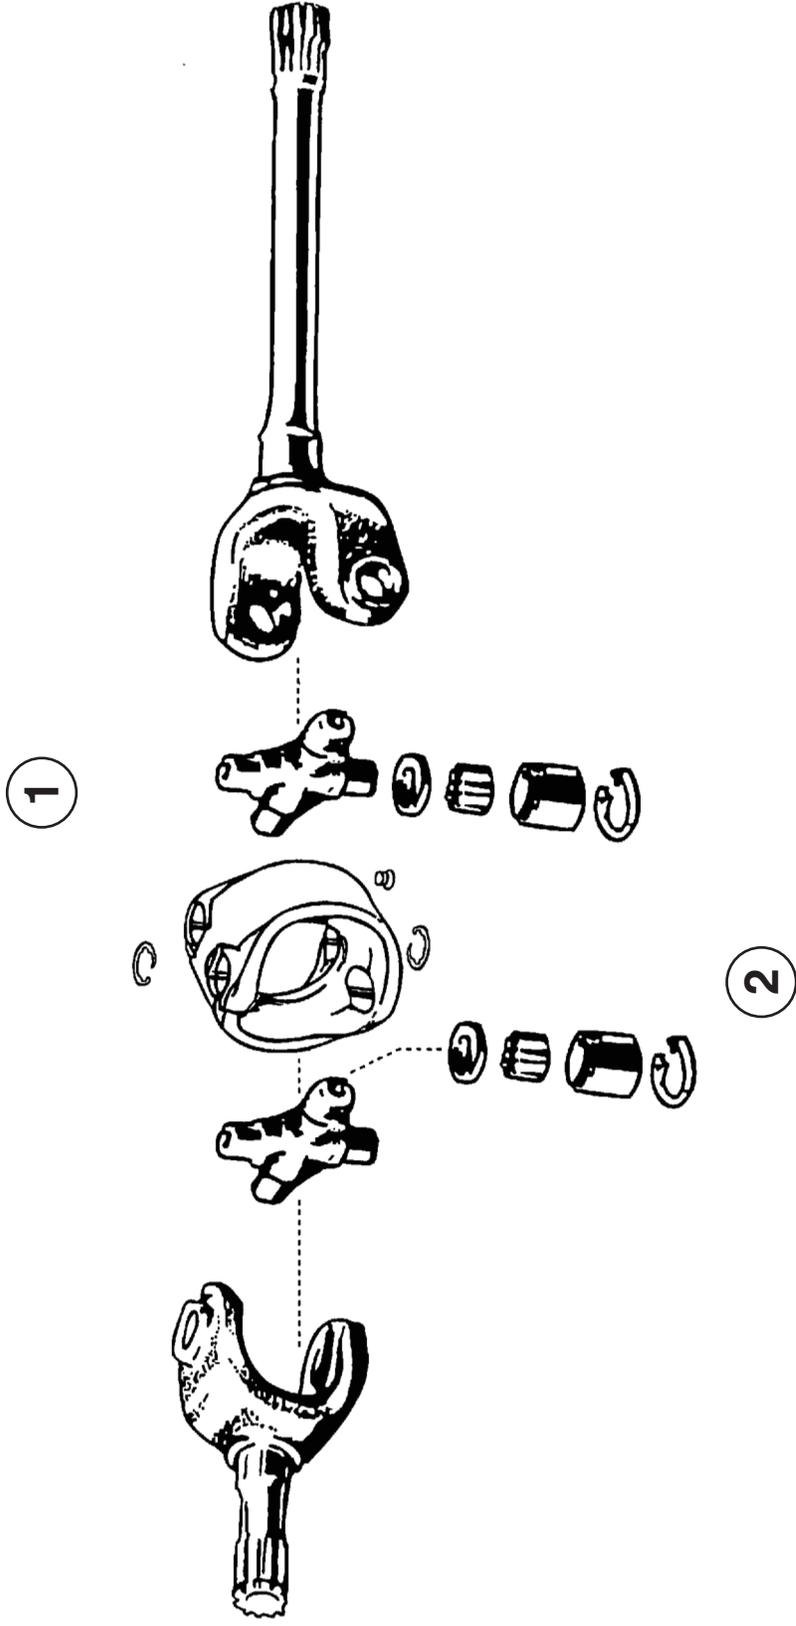


PLANETARY MT22/R/N/H

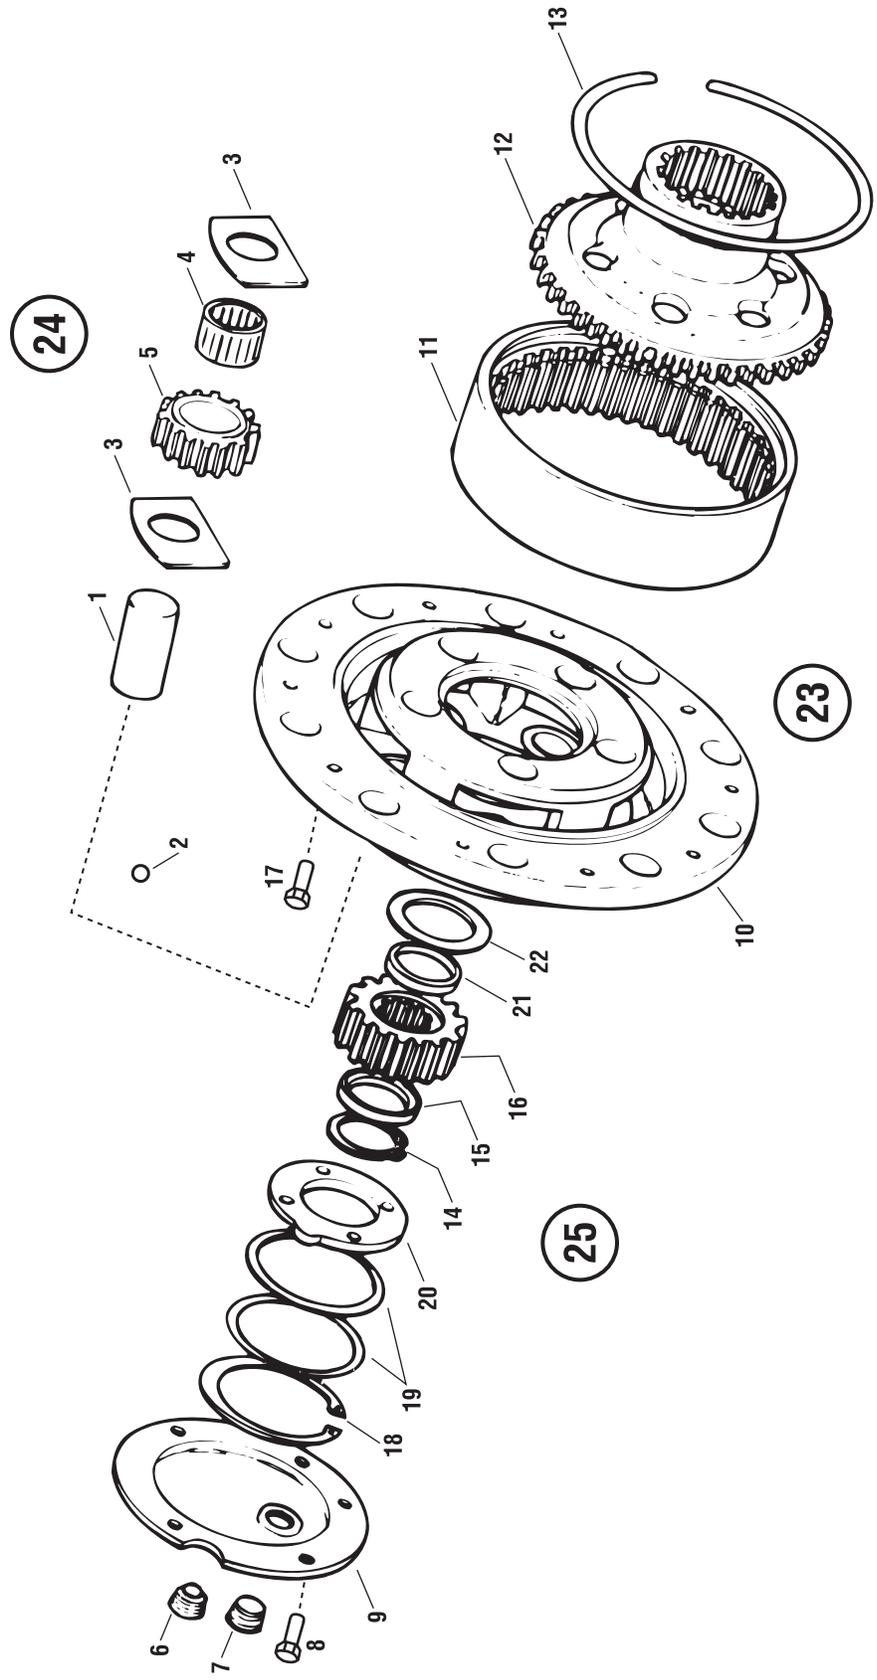


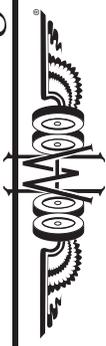Marmon-Herrington


| ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|----------|-------------|---|-----------|----------|-------------|-------------|-----------|
| 1 | MT14-1217 | Planet Gear Pin | 10 | | | | |
| 2 | MT14-1218 | Steel Ball | 10 | | | | |
| 3 | MT14-1219 | Distance Plate | 20 | | | | |
| 4 | MT14-1220 | Roller Bearing Assy. | 10 | | | | |
| 5 | MT14-1028 | Planet Gear | 10 | | | | |
| 6 | MT14-1071 | Magnetic Drain Plug | 2 | | | | |
| 7 | MT14-1070 | Fill Plug | 2 | | | | |
| 8 | 11500723 | Hex Bolt, M10 X 20 | 10 | | | | |
| 9 | MT22-1156 | End Cover | 2 | | | | |
| 10 | MT22-1161 | Planet Gear Carrier MT22, MT22N/R | 2 | | | | |
| | MT22H-1161 | Planet Gear Carrier Hub Pilot (MT22H Only) | 2 | | | | |
| 11 | MT22-1162 | Planetary Ring Gear | 2 | | | | |
| 12 | MT22-1163 | Ring Gear Support Hub | 2 | | | | |
| 13 | MT14-1207 | Retaining Ring | 2 | | | | |
| 14 | MT22-1154 | Snap Ring | 2 | | | | |
| 15 | MT22-1153 | Spacer | 2 | | | | |
| 16 | MT22-1152 | Sun Gear | 2 | | | | |
| 17 | 11500724 | Hex Bolt, M10 X 30 | 12 | | | | |
| 18 | MT22-1157 | Snap Ring | 2 | | | | |
| 19 | MT22-1158A | Shim, 0.25 MM | AR | | | | |
| | MT22-1158B | Shim, 0.50 MM | AR | | | | |
| | MT22-1158C | Shim, 2.00 MM | AR | | | | |
| 20 | MT22-1159 | Friction Disk | 2 | | | | |
| 21 | MT22-1151 | Distance Ring | 2 | | | | |
| 22 | MT22-1150 | Friction Disk | 2 | | | | |
| 23 | MT22-1200 | Planet Gear Carrier Assy. (MT22/R/N Only) (Includes Items #1, 2, 3, 4, 5 and 10) | 2 | | | | |
| | MT22H-1200 | Planet Gear Carrier Assy. (MT22H Only) (Includes Items #1, 2, 3, 4, 5 and 10) | 2 | | | | |
| 24 | MT14-1223 | Planet Gear Kit (Includes Items #1, 2, 3, 4 and 5) | 2 | | | | |
| 25 | MT22-1252 | Sun Gear/Friction Disk Kit (Includes Items #14, 15, 16, 18, 19, 20, 21, 22) AR = As Required | 2 | | | | |

WHEEL HUB, BRAKE DRUM MT22/R/N/H

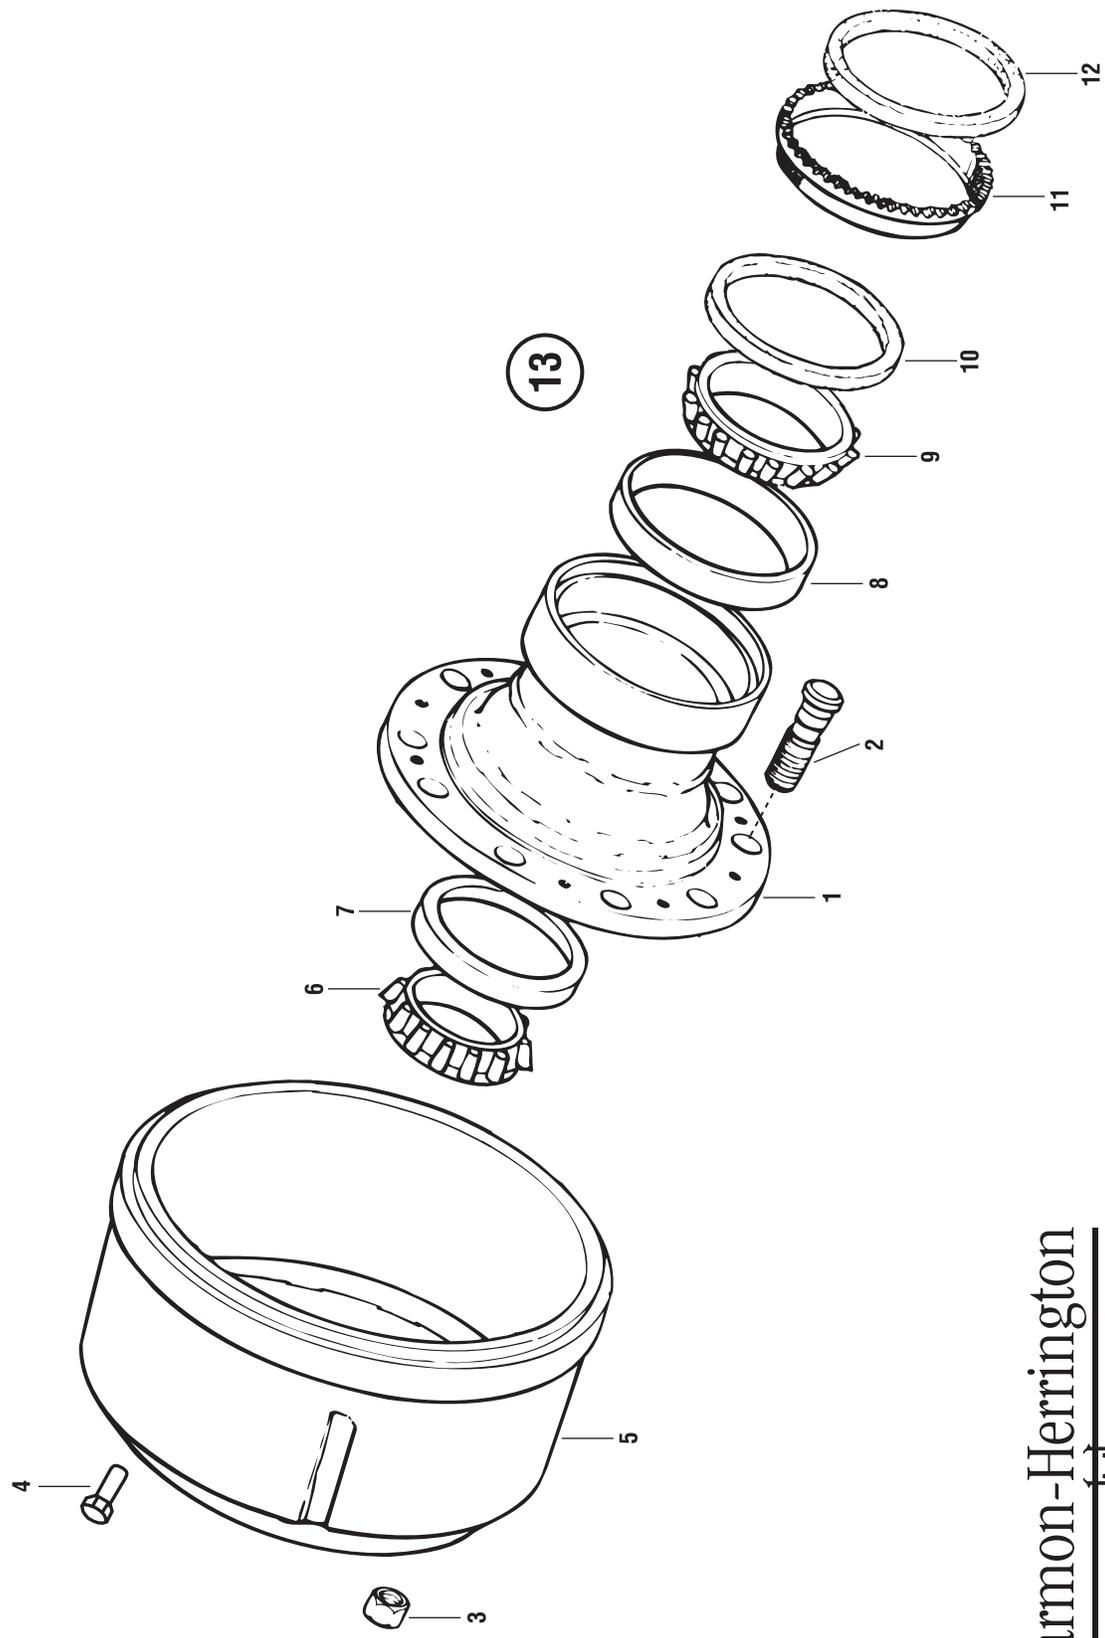


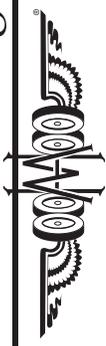Marmon-Herrington


| ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|----------|-------------|---|-----------|----------|-------------|-------------|-----------|
| 1 | MT22-1168 | Hub Assy. (MT22 Only) 1991 and older (Includes Items #2, 7, 8, 9, 10) | 2 | | | | |
| | MT22R-1168 | Hub Assy. (MT22R/N Only) (Includes Items #2, 6, 7, 8, 9, 11, 12) | 2 | | | | |
| | MT22H-1168 | Hub Assy. (MT22H Only) (Includes Items #2, 6, 7, 8, 9, 11, 12) | 2 | | | | |
| | MT22N-1168 | Hub Assy., L.H. (MT22N Only) (Includes Items #2, 6, 7, 8, 9, 11, 12) | 1 | | | | |
| 2 | MT93-2931 | Wheel Stud, L.H., Long (MT22N Only) | 10 | | | | |
| | MT93-2932 | Wheel Stud, R.H., Long (4.625) | 20 | | | | |
| | MT22-1134 | Wheel Stud Hub Pilot (MT22H Only) | 20 | | | | |
| 3 | 67011 | Wheel Nut, R.H. (MT22N Only) | 20 | | | | |
| | 67012 | Wheel Nut, L.H. (MT22N Only) | 10 | | | | |
| | MT93-1197 | Flange Wheel Nut (MT22H Only) | 20 | | | | |
| 4 | 11500779 | Hex Bolt, M10 X 40 | 4 | | | | |
| 5 | MT22-1165 | Brake Drum | 2 | | | | |
| | MT22-1165W | Brake Drum | 2 | | | | |
| 6 | MT22-1166 | Wheel Bearing, Cone, Outer | 2 | | | | |
| 7 | MT22-1167 | Wheel Bearing, Cup, Outer | 2 | | | | |
| 8 | MT22-1170 | Wheel Bearing, Cup, Inner | 2 | | | | |
| 9 | MT22-1171 | Wheel Bearing, Cone, Inner | 2 | | | | |
| 10 | MT22-1172 | Oil Seal, Hub (MT22 Only) 1991 and older | 2 | | | | |
| 11 | MT22R-1164 | Exciter Ring (MT22R/N/H Only) | 2 | | | | |
| 12 | MT22R-1172 | Hub Seal (MT22R/N/H Only) | 2 | | | | |
| 13 | MT22-1216 | Bearing Kit Hub (Includes Items #6, 7, 8, 9 & 12) | 1 | | | | |
| | | | | | | | |
| | | AR = As Required | | | | | |

**WHEEL HUB, BRAKE DRUM
 MT22/R/N/H**


BRAKE MT22/R/N/H

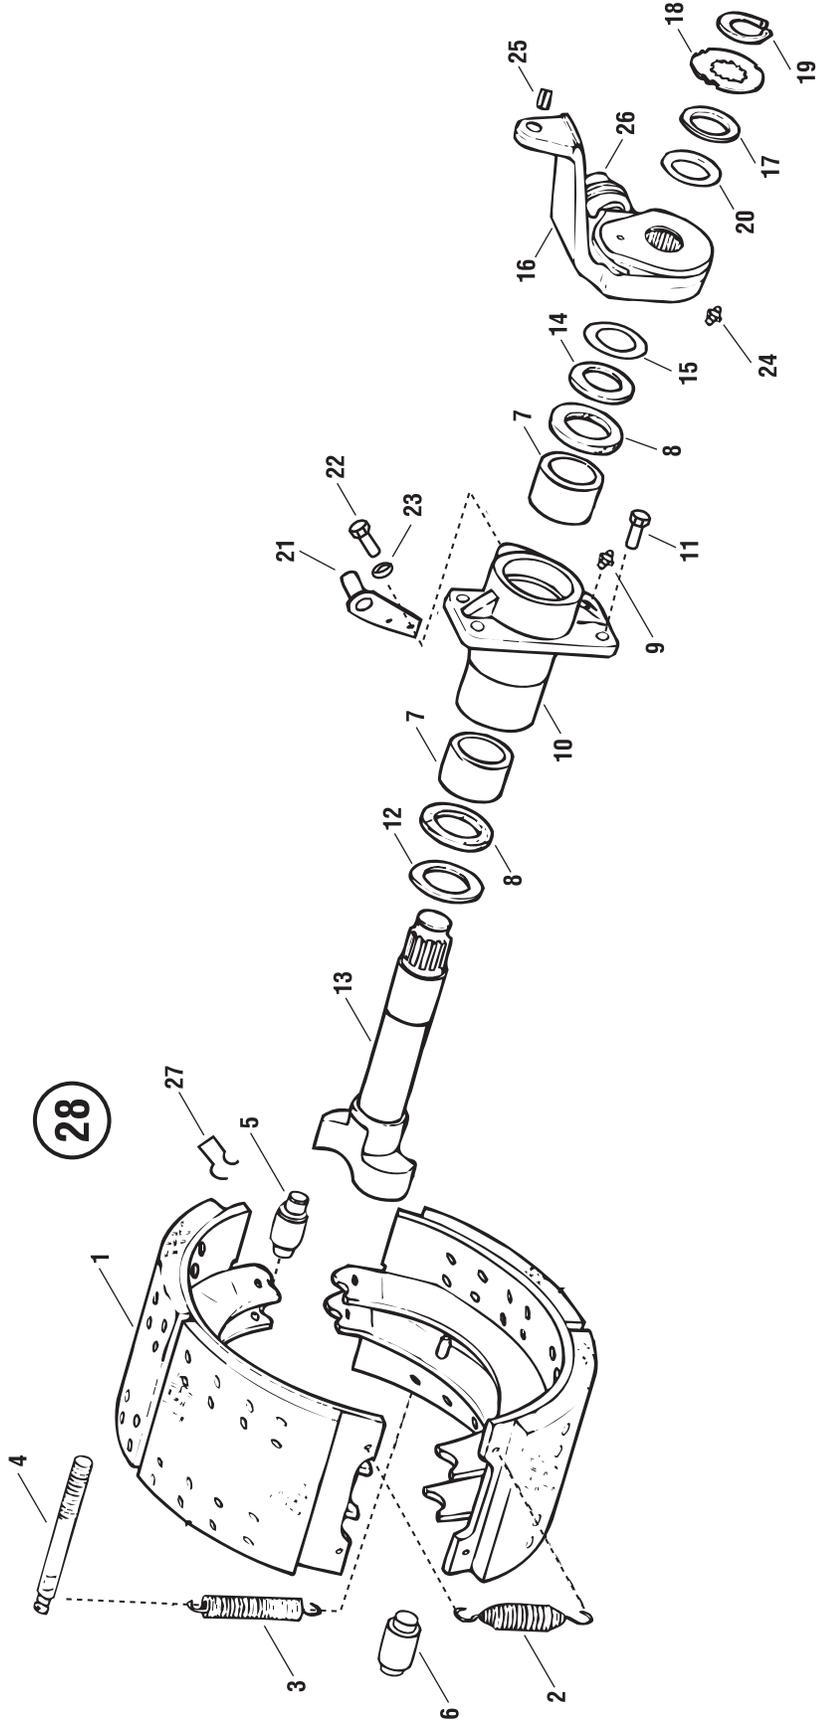

Marmon-Herrington


| ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. | ITEM NO. | MH PART NO. | DESCRIPTION | QTY. REQ. |
|----------|-------------|---|-----------|----------|-------------|---|-----------|
| 1 | MT14-1155 | Brake Shoe Assy. (MT22/R Only) | 4 | 17 | MT17-1142 | Spacer | 2 |
| | MT22-1164 | Brake Shoe Assy. (MT22N/H Only) | 4 | 18 | MT22-1187 | Wear Indication Disk | 2 |
| | MT22-1255 | Brake Shoe Kit (MT22N/H Only) (Includes Item #28) | 2 | 19 | MT17-1141 | Snap Ring | 2 |
| 2 | MT14-1156 | Return Spring, Long (MT22/R Only) | 4 | 20 | MT14-1128 | Snap Ring | 4 |
| | MT22-1177 | Brake Shoe Return Spring (MT22N/H Only) | 4 | 21 | MT22-1239 | Bumper Assy., L.H. (MT22N/H Only) | 1 |
| 3 | MT14-1157 | Return Spring, Short | 4 | 22 | MT22-1240 | Bumper Assy., R.H. (MT22N/H Only) | 1 |
| 4 | MT22-1173 | Pin, Spring Support | 4 | 23 | 11500866 | Bolt M8 X 14 - 1.25 (MT22N/H Only) | 4 |
| 5 | MT22-1178 | Brake Shoe Roller (MT22N/H Only) | 4 | 24 | 11500191 | Lock Washer M8 | 4 |
| 6 | MT22-1243 | Brake Shoe Pin (MT22N/H Only) | 4 | 25 | 191758 | Grease Fitting, 1/8 | 2 |
| 7 | MT22-1180 | Bushing | 4 | 26 | 191759 | Grease Fitting, M8 X 1.00 | 2 |
| 8 | MT22-1179 | Oil Seal | 4 | 27 | MT14-1131 | Bushing | 2 |
| 9 | 191758 | Grease Fitting, 1/8 | 2 | 28 | MT22-1242 | Cap, Automatic Slack Adj., L.H. MT22N/H | 1 |
| 10 | MT22-1181 | Spanner Housing Assy., L.H. (Includes Items #7, 8 and 9) | 1 | | MT22-1247 | Cap, Automatic Slack Adj., R.H. MT22N/H | 1 |
| | MT22-1182 | Spanner Housing Assy., R.H. (Includes Items #7, 8 and 9) | 1 | | 11500773 | Bolt, M8 X 16 - 1.25 | 2 |
| 11 | MT22-1183 | Hex Bolt Special | 8 | | 11503950 | Bolt, M6 X 20 - 1.00 | 2 |
| 12 | MT14-1142 | Washer, Special | 2 | | | | |
| 13 | MT22-1197 | Cam Shaft, L.H. (MT22N/H Only) | 1 | | | | |
| | MT22-1198 | Cam Shaft, R.H. (MT22N/H Only) | 1 | | | | |
| | MT22-1174 | Brake Spanner, L.H. (MT22/R Only) | 1 | | | | |
| | MT22-1175 | Brake Spanner, R.H. (MT22/R Only) (Not Shown) | 1 | | | | |
| 14 | MT22-1201 | Spacer (MT22N/H Only) | 2 | | | | |
| | MT22-1184 | Spacer | 2 | | | | |
| 15 | MT22-1199 | Shim, .50 MM (MT22N/H Only) | AR | | | | |
| | MT14-1144 | Shim, .50 MM | AR | | | | |
| 16 | MT22-1237 | Automatic Slack Adj., L.H. (MT22N/H Only) | 1 | | | | |
| | MT22-1238 | Automatic Slack Adj., R.H. (MT22N/H Only) | 1 | | | | |
| | MT22-1203 | Slack Adjuster, L.H. (MT22/R Only) (OBS) | 1 | | | | |
| | MT22-1204 | Slack Adjuster, R.H. (MT22/R Only) (OBS) | 1 | | | | |
| | | | | | | AR = As Required | |

TIE-ROD MT22/R/N/H

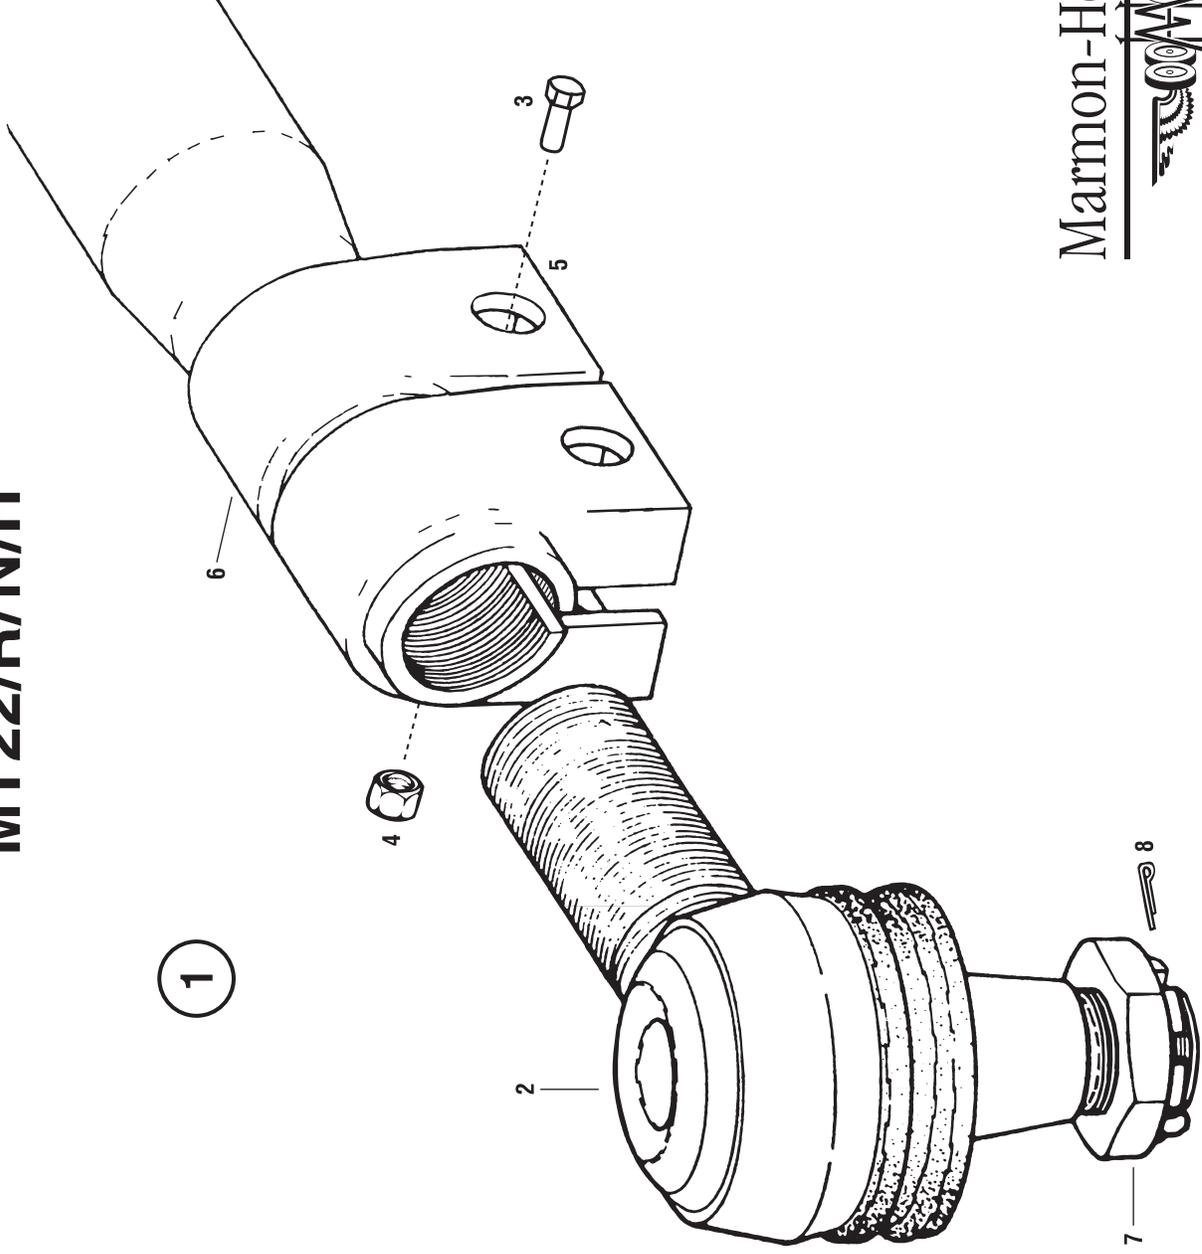


Marmon-Herrington
COACH

Marmon-Herrington



13001 Magisterial Drive • Louisville, KY 40223
(502) 253-0277 • (800) 227-0727 • Fax (502) 253-0317
E-mail: info@marmon-herrington.com

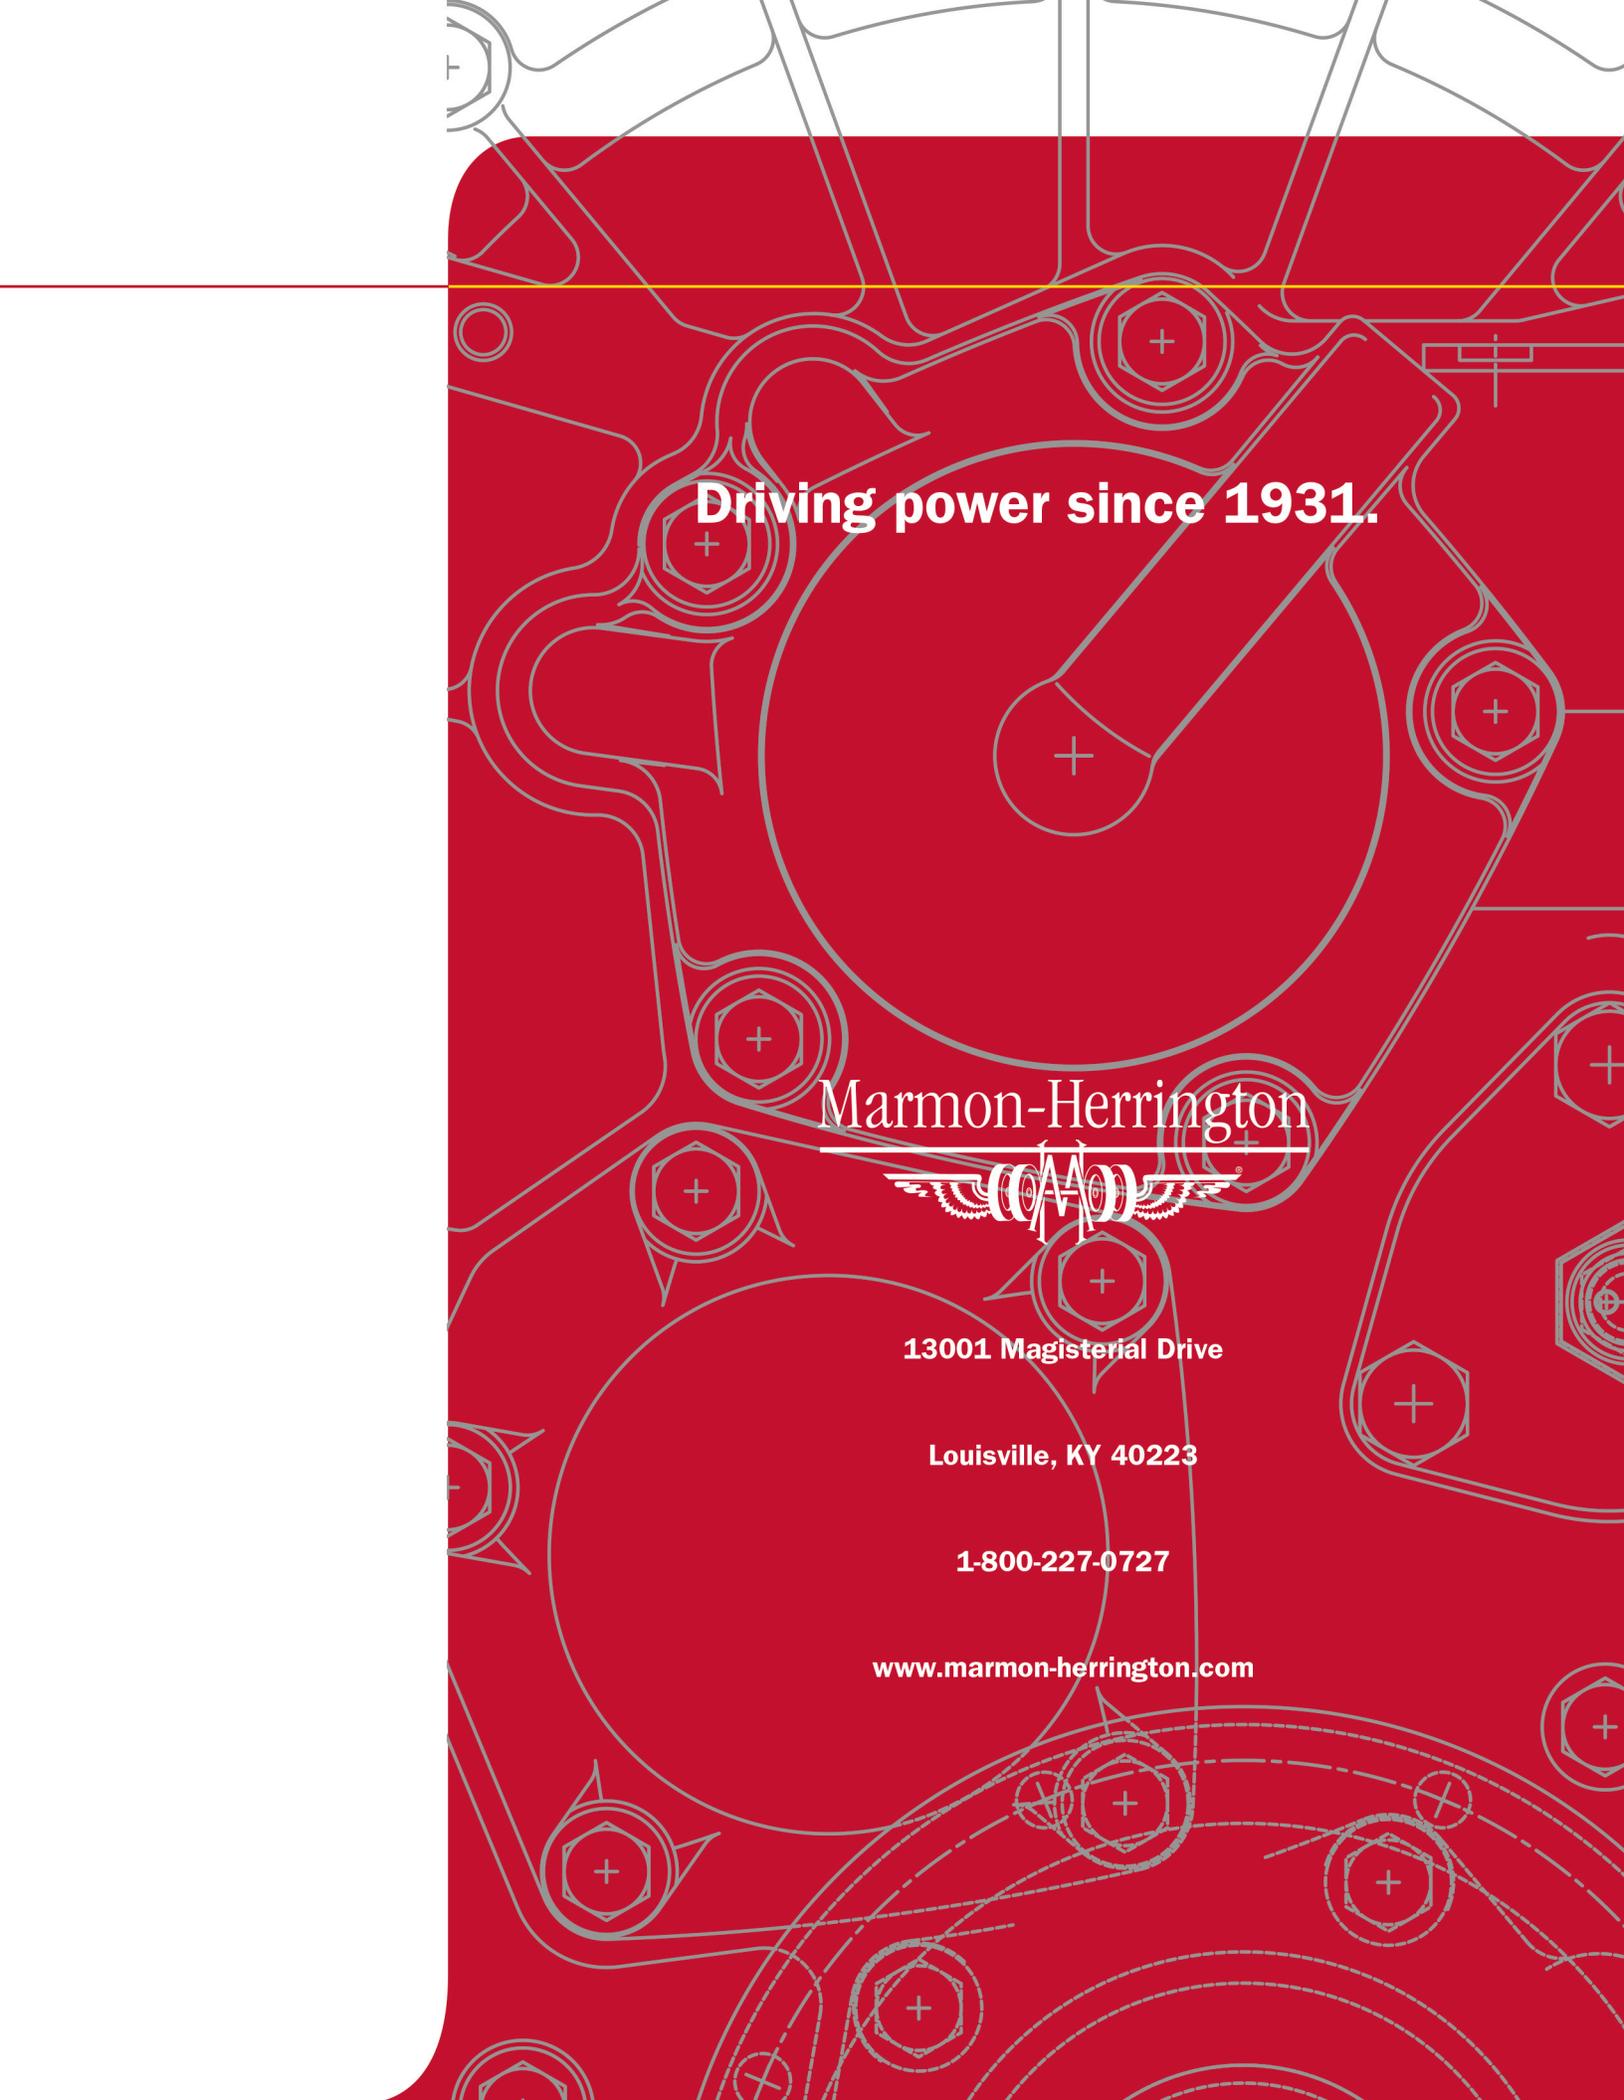

Driving power since 1931.

Marmon-Herrington



13001 Magisterial Drive

Louisville, KY 40223

1-800-227-0727

www.marmon-herrington.com